

### HVAC | Controls not responding



Ensure the connectors (10 pin) are set in the correct orientation. See photo below for correct locking position.

