

Overall LED Feedback

LED Light	Radio Programming Section	Vehicle Programming Section
Solid Green	Pass	Pass
Slow Red Flash	Fail	Pass
Slow Green Flash	Pass	Fail
Solid Red	Fail	Fail

Radio LED Feedback

Radio	LED Pattern	Keynotes (reference below)
Pioneer / Jensen		
Boss (type 1) / Dual / Sony		3 (Boss)
Kenwood		1
JVC		
Alpine		2
Boss (type 2)		3
Clarion (type 1)		3
Clarion (type 2)		3
Boss (type 3)		3
Insane Audio		
Magnadyne		
Visteon / Boss (type 4)		3 (Boss)
JBL		
Eclipse (type 1)		3
Eclipse (type 2)		3
Philips		
XITE		
Parrot		4
Valor		
LG		
Kicker		
Axxera		

- 1) If the LED pattern shows **JVC**, change the radio type to **Kenwood**. Refer to the **Changing Radio Type** document.
- 2) If the LED pattern shows **Alpine**, but an **Alpine** radio isn't installed, make sure the 3.5mm jack is plugged into the radio.
- 3) If no SWC, change the radio type to the opposite radio type. Refer to the **Changing Radio Type** document.
- 4) **AX-SWC-PARROT** required (sold separately). The software in the radio must be rev. 2.1.4 or higher.