

Fairing Disassembly

FLH/Batwing models:

1. Cover the front fender.
2. Remove (2) T-27 Torx bolts from inner fairing. (under mirrors) (Figure A, step 2)
3. Remove (2) T-27 Torx bolts from outer edges of inner fairing near the fork tubes. (facing forward) (Figure A, step 3)
4. Remove (3) T-27 Torx bolts from bottom edge of windshield. (Figure A, step 4)
[Note: Windshield and fairing will be loose once these screws are removed. Use extreme caution not to damage fairing or windshield.]
5. Remove windshield taking caution that the outer fairing is loose.
6. Lift away and unplug headlight to remove outer fairing. (Figure B)

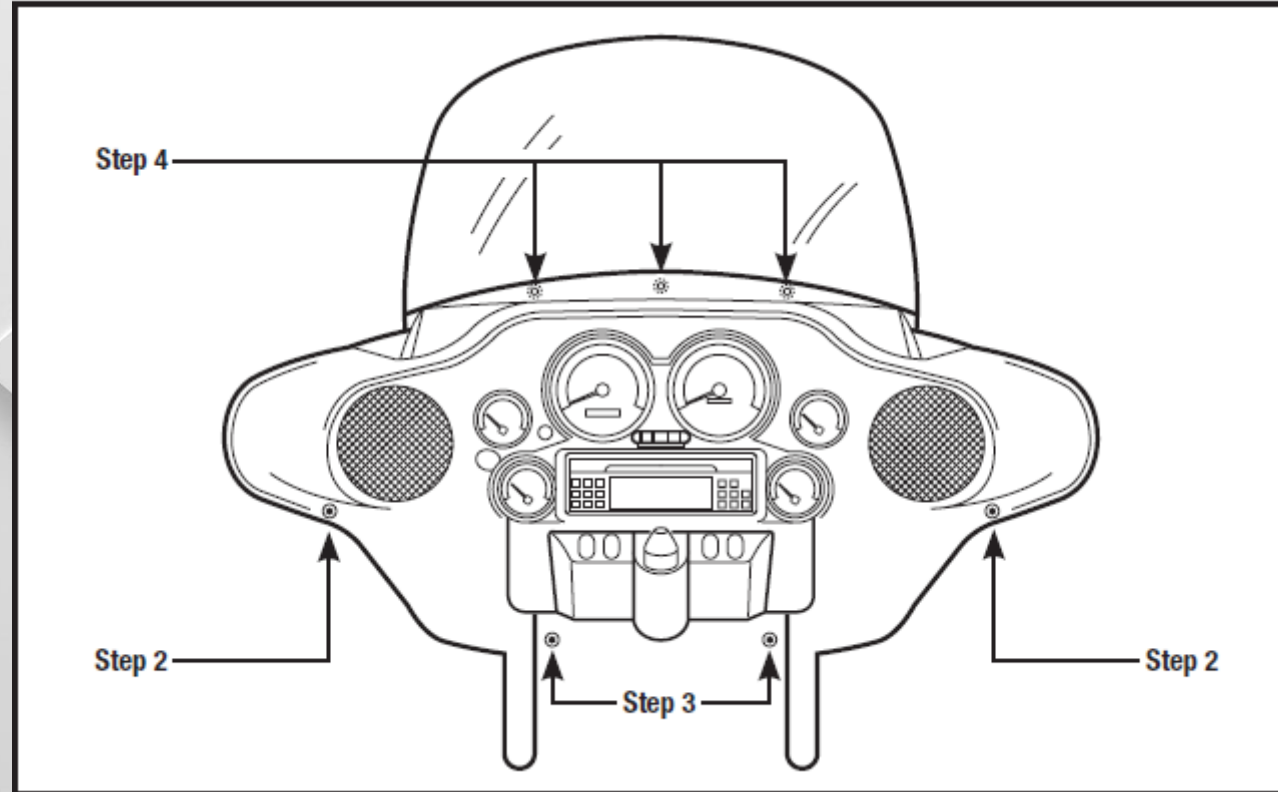


Figure A



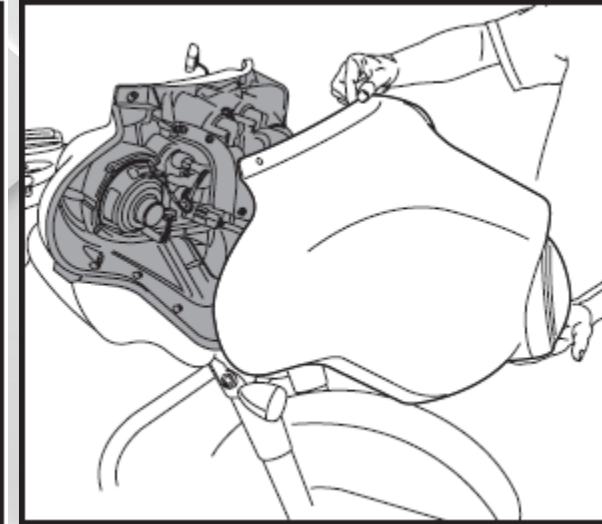


Figure B

Installing: BC-AMP03 Bracket

1. Remove the upper Bolt from the Radio support Bracket.
[NOTE: Silver bracket will need to be removed to mount the BC-AMP03 bracket.]
2. Route Amplifier wires as needed, mount Micro Amp to BC-AMP03 Bracket.
[NOTE: Pre-drilled hole for Metra Powersports Amps, Can also be used to mount other amplifiers (drilling required)]
3. Using Radio support Bolt, loosely secure BC-AMP03 Bracket to Inner fairing, line up remaining bolts and secure to inner fairing.
(Caution, Do not over torque Fasteners. Factory spec is 20 In. Lbs.)
4. Reassemble the fairing in reverse order of disassembly.

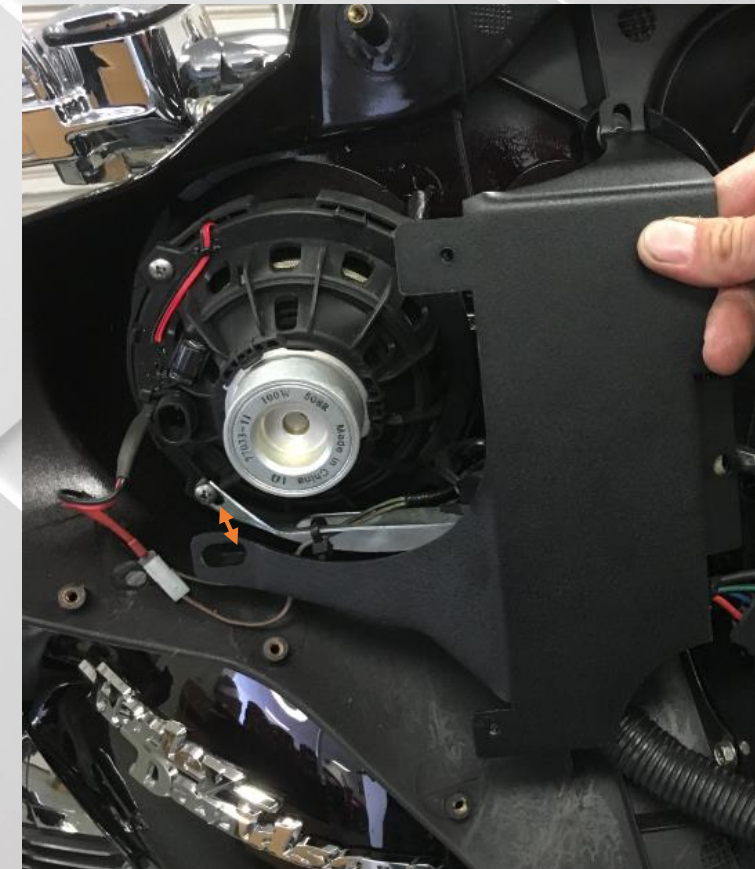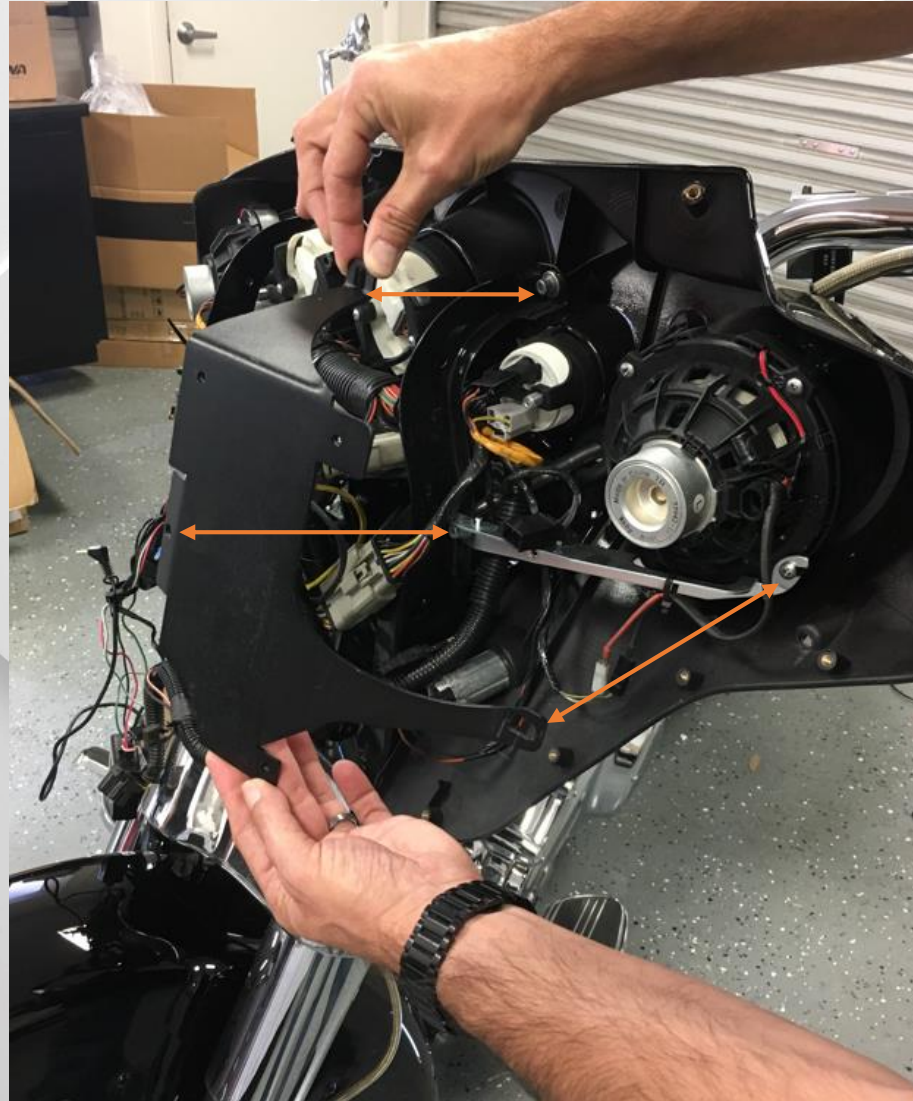

[NOTE: Some models may require the upper support to be modified to bolt to the inner Fairing upper fastener.]