

JP-707RGBKT



Jeep Wrangler 2007-UP*
Jeep Gladiator 2020-UP*
7" HEADLIGHTS & 4" FOG LIGHTS
WITH PRO CHASING CONTROLLER

*JK models with factory LED headlights are not compatible with this product.

Product Features

- Chasing LED halos
- Turn signal function
- App and RF remote controlled

Part Components

A) Headlight & Fog Light Set B) Pro Chasing Controller C) Remote and Hardware

















TABLE OF CONTENTS

BEFORE YOU START	2
SPECIFICATIONS	2
WRANGLER JK HEADLIGHT REMOVAL	3
WRANGLER JK FOG LIGHT REMOVAL	4
WRANGLER JL & JT HEADLIGHT REMOVAL	5
WRANGLER JL & JT FOG LIGHT REMOVAL	6
INSTALLATION	7
DIAGRAM	8
TOOLS REQUIRED	

Wrangler JK

- Plastic pry tool
- T-15 Torx® driver Crimper
- Wrangler JL & JT
- Stripper

General

Phillips screw driver

- Plastic pry tool
- Pick tool
- 8mm driver 10mm driver
- Side cutterFlectrical tape
- T-25 Torx® driver
- Cable ties

Attention! When testing the aftermarket equipment, ensure that all factory equipment is connected before cycling the key to ignition.

BEFORE YOU START

Before you start, make sure you have everything that is needed for the installation. These models require additional parts.*

ZOIO-ZOIO WIGHIGHEL JK	ZUIU-ZUIU WIGIIYIEI JK	ZOIO OP WIGHIGHEN JE	ZUIO-UP WI aligici JL	ZOIO OPTITUIIGICI JE
-Any trim	-Hard Rock Rubicon X	-Any trim	-Sport	-Rubicon
	-10th Anniversary Edition	2020-Up Gladiator	2020-Up Gladiator	-Sierra
• <u>JP-JWFLAH</u> adapter harness		-Any trim	-Sport	2020-Up Gladiator
	 <u>JP-JFOG</u> fog light bracket JP-JWFLAH adapter harness 			-Rubicon
	3F-3WI LAIT adapter flamess	• <u>JP-JLB7</u> headlight bracket	• <u>JP-JLB7</u> headlight bracket	-Sierra
		• <u>JP-LAH1</u> (optional) DRL adapter	• J <u>P-LAH1 (</u> optional) DRL	• <u>JP-JLB7</u> headlight bracket
		JP-JWFLAH adapter harness	adapter	• <u>JP-LAH1</u> (optional) DRL
			• J <u>P-JF0G2 f</u> og light bracket	adapter
			 JP-JWFLAH adapter harness 	IP-IFOG fog light bracket

2018-I In Wrangler II

JP-JWFLAH adapter harness

2018-HnWrangler II

GENERAL SPECIFICATIONS

7" HFADI IGHTS

2010-2019 Wrangler IK

- 50 watts each
- Lumen: 4200lm (high beam), IP rating: IP68 3200lm (low beam)
- Color Temperature: 6500KK
- Material: Die-cast aluminum alloy housing

Lens: Polycarbonate

2010-2019 Wrangler IK

- Operating Voltage: 10-32V
- H4 to H13 connectors included
- Canbus decoders included

4" FOG LIGHTS

- 30 watts each
- Lumen: 3600lm
- Color Temperature: 6500K
- Material: Die-cast aluminum alloy housing
- Lens: Polycarbonate
- IP rating: IP68

PRO CHASING CONTROLLER

2019-Hn Wrangler II

- Addressable LED controller
- 170+ color changing patterns
- Turn signal halo function (both headlights and fog lights)
- DIY pattern and music sync function
- App controlled (Pro RGB app)
- RF card remote included

^{*}Please visit MetraOnline.com for the latest application details.

WRANGLER JK HEADLIGHT REMOVAL

- 1. Open hood and remove the (6) push pin clips across the top of the grille using a plastic pry tool. (Figure A)
- Gently lean grille forward to access panel clips at rear bottom of grille. Using a panel pry tool, release grille from clips. (Figure B)
- 3. Disconnect the left and right turning signal. (Figure C)
- 4. Remove the (4) T-15 Torx® screws from each headlight retaining ring. New headlights will be secured in place with the factory hardware.(Figure D)
- 5. Unplug and remove the headlight.
- 6. Trim off keyway from the factory mounting plate. (Figure E)
- 7. Connect the included H4 adapter and Canbus decoder to the vehicle harness for each headlight.
- 8. Continue to fog light removal on page 4.

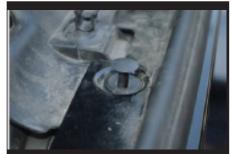


Figure A



Figure C



Figure B



Figure D



Figure E

WRANGLER JK FOG LIGHT REMOVAL

- Unscrew the (4) plastic screws securing the 0E air dam to the bottom of the front bumper, remove screws and inserts (Figure A)
- 2. Remove the remaining (2) plastic screws securing the air dam to the lower cross member. (Figure B)
- Locate the wiring harness plug, lift up the clip and pull connector off of fog light. (Figure C)
- 4. Remove the (4) screws securing each fog light to the bumper and remove the fog lights. (Figure D)
- 5. For 2007-2009 Wrangler continue to installation on page 7.
- 6. For 2010-2018 Wrangler plug JP-JWFLAH (not included) into factory harness.
- 7. Continue to installation on page 7.



Figure A



Figure C



Figure B



Figure D

WRANGLER JL AND GLADIATOR HEADLIGHT REMOVAL

- Open hood and remove the (6) push pin clips across the top of the grille using a plastic pry tool. (Figure A)
- Pressure clips will be the only things holding the grille to the Jeep at this point. Pull from the bottom corner of the grille to release the clips and remove grille. (Figure B) Remove the (3) 10mm bolts from
- the headlight assembly.
- Unplug and remove the headlight. Install JP-JLB7 headlight brackets (not included), and plug the H4 to OE adapter into the factory headlight harness (included with JP-JLB7).
- Continue to fog light removal on page 6.



Figure A



Figure B

WRANGLER JL AND GLADIATOR FOG LIGHT REMOVAL

- Using pry tool lift insert from center of clip, remove the (8) inserts and clips from lower air dam. (Figure A)
- Remove the (2) 8mm retainer bolts from the lower air dam. (Figure A)
- Remove splash guard/bumper cover
 - **Sport** splash guards. (Figure B) Remove (1) 8mm bolt, and (6) T-25 Torx® screws from bumper splash guards. (Figure C)
 - **Rubicon / Sierra** bumper cover. Using pry tool to remove 6 panel clips.
- Removing the fog lights
 - Rubicon Remove (4) 8mm screws holding light in, and disconnecting harness. (Figure D)
 - Sport Remove (3) T-25 Torx® screws holding fog light bracket on. (Figure E)
- Plug JP-JWFLAH (not included) into factory harness.
- Continue to installation on page 7.



Figure A



Figure C



Figure B



Figure D



Figure E




INSTALLATION

- 1. Locate a suitable location to mount the Pro Chasing controller inside the engine bay.
- 2. Connect the black wire from the controller to chassis ground. There are several factory ground points along the fire wall and sides of the engine bay.
- 3. Connect the red wire from the controller to a switched +12VDC source. Adding a 10 amp in-line fuse is recommended. On 2018-Up Wrangler JL and 2020-Up Gladiator, using the JP-LAH1 (sold separately) will provide an easy light switch controlled power source.
- 4. Using a digital multi-meter, locate the +12VDC wire for the left and right turn signals located at the lights. Note the wire colors. Connect the green wire from the controller to the left (driver) turn signal wire, and connect the yellow to the right (passenger) turn signal wire.
- 5. Run the left channel 4 pin cables to the driver side headlight and fog light locations, making sure to avoid hot surfaces and pinch points. Secure the cables approximately every six inches.
- 6. Run the right channel 4 pin cables to the passenger side headlight and fog light locations, making sure to avoid hot surfaces and pinch points. Secure the cables approximately every six inches.
- 7. Connect the 4 pin cable to the new headlight and plug the H4 connector into the vehicle harness or previously installed adapter. Mount headlight into vehicle, then repeat on the other side.
- 8. Connect the 4 pin cable to the new fog light and plug the 9145 connector into the vehicle harness or previously installed adapter. Mount fog light into vehicle, then repeat on the other side.
- 9. Download app (QR code on back cover of instructions) for smart phone control, and refer to Pro Controller instructions for setup. Pro Controller can also be controlled from RF remote (included).
- 10. Test the low beam, high beam, turn signals, and chasing functions.
- 11. Preform any needed adjustments on the new headlights and fog lights. The adjustment is to properly aim the lights to generate the correct beam pattern.

 Details on the procedure can be found in the vehicle service manual. There is also support videos on MetraOnline.com.
- 12. Reinstall grille and any other removed panels.





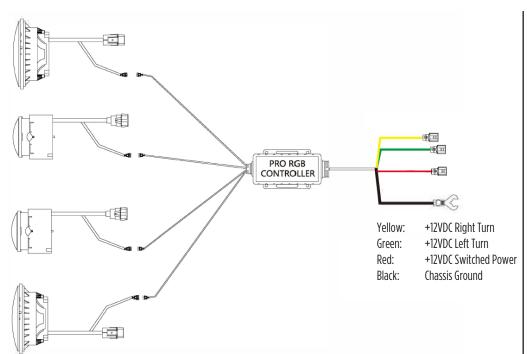

Having difficulties? We're here to help.



Contact our Tech Support line at: 386-257-1187



Or via email at: techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM Saturday: 10:00 AM - 7:00 PM Sunday: 10:00 AM - 4:00 PM



KNOWLEDGE IS POWER

irihance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. og onlo www.installerinstitute.com or call 000-334-6782 for more information and take steps toward a better tomorrow.



Metra Recommends MECP certified technicians