



## THE INSTALLER'S CHOICE

### Replacement Headlight with Halo and Turn Signal

The headlight replacements come with a H4 connector. This connector contains, both high and low beam connections, and a common ground.

To use the DRL function, connect the DRL wire to a switched +12V source, such as an accessory or ignition circuit. The DRL halo will illuminate when this circuit is activated. Connect the Turn Signal wire to the +12V source for the turn signal light for that side of the vehicle.

