





(Figure C)

Installation Instructions

1. Connect one end of the resistor to the **Blue/Yellow** wire from the radio. Connect the other end of the resistor to the **Brown** wire from 3.5mm adapter included with the ASWC-1. (Figure A)
2. Proceed with programming the steering wheel controls. Once the ASWC-1 interface shows the correct radio (5 LED flashes), remove the resistor.
3. Reconnect the **Blue/Yellow** and **Brown** wires without the resistor in place. (Figure B)
4. Test the steering wheel controls for proper functionality.
5. The installation is now complete.

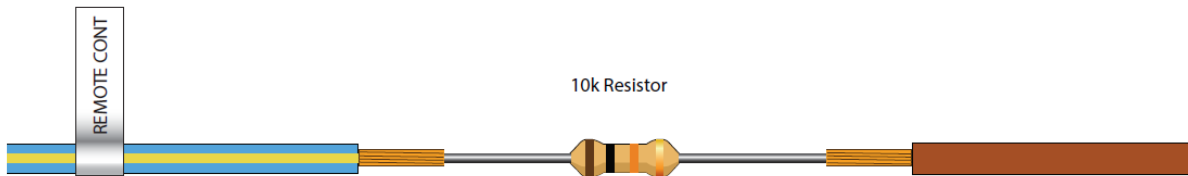

(Figure A)

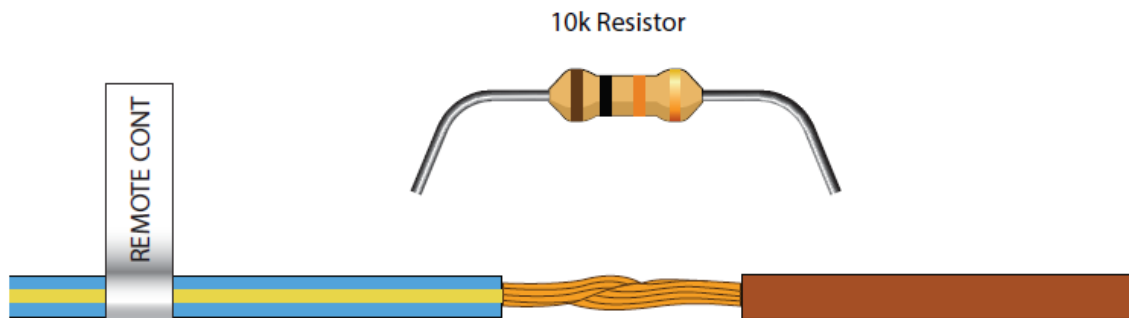

(Figure B)

Manual Program

As an alternative, the radio can also be manually programmed to the ASWC-1 interface.

1. Program the interface to the vehicle following the vehicle specific document.
2. Turn the radio off.
3. Cycle the key off, then back on.
4. Wait until the interface's light flashes **Green** one time then goes out.
5. Press and hold the **Volume Down** button on the steering wheel until the interface's light turns solid **Red**, then release. The light will then go out indicating that the interface is now in **Changing Radio Type** mode.
6. Press and hold the **Volume Up** button on the steering wheel until the interface's light turns solid **Red**, then release. Radio number 1 has now been programmed. Repeat this step four more times.
7. Press and hold the **Volume Down** button on the steering wheel until the interface's light turns solid **Red**. The light will remain solid **Red** for 3 seconds while it stores the new radio information. After the light goes out, turn the radio on and test the steering control wheel controls.
8. The installation is now complete.