



4x6 / 5x7

The 4x6 and 5x7 headlight replacements come with a H4 connector. This connector contains, both high and low beam connections, and a common ground.

To use the DRL function, connect the DRL wire to a switched +12V source, such as an accessory or ignition circuit. The DRL halo will illuminate when this circuit is activated.

