



HE-WRRK

**WIRELESS REMOTE
CONTROL RELAY &
HARNESS**



The HE-WRRK is a wireless remote control and receiver with a simple 2 wire connection to the battery so no wires are needed to be ran inside the vehicle. It is designed to be used with one HEISE LED light bar, driving light, or work light.

The HE-WRRK offers on/off function and 9 different flash options.

Instructions:

1. Connect the red wire of HE-WRRK to the 12 volt battery (+) post and the black wire to the (-) battery post.
2. Plug the desired HEISE LED light into the HE-WRRK.
3. If your light doesn't have the gray connector on it, simply attach the gray to green adapter and continue with install.
4. The HE-WRRK comes with a 6 foot extension if the extra length is needed.
5. Secure the HE-WRRK receiver box either by screws or wire ties.

NOTE: If an additional light bar is desired the **HE-EYHK (Y ADAPTER HARNESS KIT)** can be purchased separately which allows two HEISE light bars, driving lights, or work lights 150 watts or less each to be used with the HE-WRRK

Functions of the HE-WRRK are as follows:

A – Turns the light bar/cubes on and off

B 1 time – Flash 3 times quickly then quick pause, flashes 3 times quickly then quick pause, repeats over and over

B 2 times – flashes quickly for 3 seconds then slow flashes for 5 seconds, repeats over and over

B 3 times – alternates on and off somewhat fast (like a turn signal)

B 4 times – flashes on/off/on/off then pauses, flashes on/off/on/off then pauses, repeats over and over

B 5 times – flashes on then off and repeats, slower flash than B 3 times

B 6 times – starts flashing on and off fast then slows down, repeats

B 7 times - starts flashing on and off slow then speeds up, repeats

B 8 times – flashes one time fast then pauses, flashes two times fast then pauses, flashes 3 times fast then pauses...etc...

C – Each push goes in reverse order as **B**

D – S.O.S. flash pattern

NOTE: If the battery in the remote dies or the remote is lost, there is a On/Off button on the control box to manually turn the lights on or off.

Remote Control Programming

The remote already comes programmed to the receiver box however there may be a time where you need to replace the remote or there are two receiver boxes that you want to control with one remote or even using two HE-WRRK's and the remotes interfere with each other and you want to separate them.

Follow the steps below to program or delete a remote:

To Program a remote:

1. Start by having the HE-WRRK connected to the desired LED light bar as well as a power source and ground.
2. Push the Reset button on the top of the receiver unit till the LED lights flash twice (it will be immediate).
3. Now push any button on the wireless remote within 5 seconds and the LED lights will flash 3 times to indicate the remote is programmed.

To clear remotes:

1. Start by having the HE-WRRK connected to the desired LED light bar as well as a power source and ground.
2. Push and hold the Reset button on the top of the receiver unit till the lights flash 5 times.
3. The remotes are now cleared from the memory and no remotes will work. You must now program a remote in order for the HE-WRRK to operate properly.



1-800-221-0932 www.HeiseLED.com
460 Walker Street, Holly Hill, FL 32117