

USB-CAB INSTRUCTIONS

For installation and operation instructions, please go to:
www.axessinterface.com (<http://www.axessinterface.com/>)
 and click on the “Firmware Downloads” tab

1. Download the webxpress updater program from www.axessinterface.com.
2. Once downloaded double click the webxpress program icon located on your desktop and follow prompts. (note: For windows Vista users right click on icon and click “run as administrator”).
3. Once installed connect the USB-CAB to your computer (sold separately) and follow prompts to install drivers. (Note: not all computers will need to do this).
4. Once drivers are installed open the USB bootloader program which is located in the “all program” section of your start menu.
5. Open up the Axxess interface box that needs to be updated to access the 4-pin serial port on the circuit board.
6. With the USB boot loader program opened, click “update unit board”. When prompted, plug the USB-CAB into the 4-pin serial port of the Axxess interface and the board will begin to update to the latest version.

1-800-221-0932 www.metraonline.com © COPYRIGHT 2007-2009 METRA ELECTRONICS CORPORATION
 REV. 05/06/09 INSTUSB-CAB

USB-CAB INSTRUCTIONS

For installation and operation instructions, please go to:
www.axessinterface.com (<http://www.axessinterface.com/>)
 and click on the “Firmware Downloads” tab

1. Download the webxpress updater program from www.axessinterface.com.
2. Once downloaded double click the webxpress program icon located on your desktop and follow prompts. (note: For windows Vista users right click on icon and click “run as administrator”).
3. Once installed connect the USB-CAB to your computer (sold separately) and follow prompts to install drivers. (Note: not all computers will need to do this).
4. Once drivers are installed open the USB bootloader program which is located in the “all program” section of your start menu.
5. Open up the Axxess interface box that needs to be updated to access the 4-pin serial port on the circuit board.
6. With the USB boot loader program opened, click “update unit board”. When prompted, plug the USB-CAB into the 4-pin serial port of the Axxess interface and the board will begin to update to the latest version.

1-800-221-0932 www.metraonline.com © COPYRIGHT 2007-2009 METRA ELECTRONICS CORPORATION
 REV. 05/06/09 INSTUSB-CAB

USB-CAB INSTRUCTIONS

For installation and operation instructions, please go to:
www.axessinterface.com (<http://www.axessinterface.com/>)
 and click on the “Firmware Downloads” tab

1. Download the webxpress updater program from www.axessinterface.com.
2. Once downloaded double click the webxpress program icon located on your desktop and follow prompts. (note: For windows Vista users right click on icon and click “run as administrator”).
3. Once installed connect the USB-CAB to your computer (sold separately) and follow prompts to install drivers. (Note: not all computers will need to do this).
4. Once drivers are installed open the USB bootloader program which is located in the “all program” section of your start menu.
5. Open up the Axxess interface box that needs to be updated to access the 4-pin serial port on the circuit board.
6. With the USB boot loader program opened, click “update unit board”. When prompted, plug the USB-CAB into the 4-pin serial port of the Axxess interface and the board will begin to update to the latest version.

1-800-221-0932 www.metraonline.com © COPYRIGHT 2007-2009 METRA ELECTRONICS CORPORATION
 REV. 05/06/09 INSTUSB-CAB

USB-CAB INSTRUCTIONS

For installation and operation instructions, please go to:
www.axessinterface.com (<http://www.axessinterface.com/>)
 and click on the “Firmware Downloads” tab

1. Download the webxpress updater program from www.axessinterface.com.
2. Once downloaded double click the webxpress program icon located on your desktop and follow prompts. (note: For windows Vista users right click on icon and click “run as administrator”).
3. Once installed connect the USB-CAB to your computer (sold separately) and follow prompts to install drivers. (Note: not all computers will need to do this).
4. Once drivers are installed open the USB bootloader program which is located in the “all program” section of your start menu.
5. Open up the Axxess interface box that needs to be updated to access the 4-pin serial port on the circuit board.
6. With the USB boot loader program opened, click “update unit board”. When prompted, plug the USB-CAB into the 4-pin serial port of the Axxess interface and the board will begin to update to the latest version.

1-800-221-0932 www.metraonline.com © COPYRIGHT 2007-2009 METRA ELECTRONICS CORPORATION
 REV. 05/06/09 INSTUSB-CAB