

Continued from page 3

or previous browse mode. Press the '3' button to select the current **browse** mode. The available choices are shown on the radio display. Use the '1' & '5' buttons to go to the next or previous choices. To select the currently displayed choice, press the '3' button.

To finish or to simply leave the **browse** mode, press the '2' button. This will exit the current mode and go back one step.

If your OEM radio does not display text the optional **XIA-LCD** (sold separately) is recommended to make browsing through the iPod easier.

IPOD RANDOMIZE MODE WHEN USING XIA AS A SDARS DEVICE

When in normal IPOD mode and not in the '**browsing** mode,' the IPOD can be set to '**song randomization**'. To set the songs to operate in the order the IPOD device sets them, press the '1' (▲) preset button. In order to set the IPOD to play songs in a random order, press the '5' (▼) preset button. This will also reset the song number to #1 on the display to indicate we have just entered this **random** mode.

BROWSING MODE WHEN USING XIA AS A EXTERNAL CD DEVICE

If you are using an iPod and the XIA interface is set up in cd changer mode (your OEM radio is not satellite ready) the optional **XIA-LCD** (sold separately) is required for browsing.

IPOD RANDOMIZE MODE WHEN USING XIA AS A EXTERNAL CD DEVICE

When in normal IPOD mode and not in the '**browsing** mode,' the IPOD can be set to '**song randomization**.' To set the songs to operate in the order the IPOD device sets them, press the '4' (RND) preset button. In order to set the IPOD to play songs in a random order, press the same '4' (RND) preset button. This will also reset the song number to #1 on the display to indicate we have just entered this **random** mode.

MISCELLANEOUS RADIO BUTTON FUNCTIONS

• CHANGING CHANNELS / STATIONS

Use the '**SEEK**' up & down to select the next or previous channel or station. The radio will display the currently playing channel. This is true for both the XM & IPOD devices.

• The **SCAN** button will give about a 10 second sample of each song while in IPOD until it goes to the next one. To stop at a given song, press the '**SCAN**' button to leave this mode and listen to the current song. **SCAN** has no functionality in XM.

• The **TIME** button will switch between the displaying the channel number and the song time in IPOD if its an External CD changer, otherwise it will switch between the channel number and the current time. In XM, it will switch the channel number with the current time.

• The **PTY** button will go to the next channel in XM mode. In IPOD mode, it will toggle the display through the following sequence :

• **Song Station**

• **Channel Info**

• **Artist Name**

• **Album Name**

• **Title Info**

• **FF & REW** functions in IPOD as expected, but does not in **XM** mode. Press once to start fast-forwarding through a song & then press once again to put it back into **play** mode.

XIAH-CH1

OPERATING INSTRUCTIONS

*** READ IMPORTANT WARNING ON PAGE 1 BEFORE ATTEMPTING ANY INSTALLATION**

APPLICATIONS:

CHRYSLER

300M 2002-2004

Concorde 2002-2004

LHS 2002-2004

Pacifica 2003-2007

PT Cruiser 2002-2005

Sebring 2002-2006

Town & Country 2002-2007

Voyager 2002-2004

DODGE

Caravan 2002-2007

Dakota 2002-2004

Durango 2002-2003

Intrepid 2002-2004

Neon 2002-2006

Stratus 2002-2006

Ram 1500 2002-2005

JEEP

Grand Cherokee 2002-2004

Liberty 2002-2007



XIAH-CH1

XIAH-CH1

XIAH-CH1

* IMPORTANT WARNING


THIS PRODUCT INCLUDES INSTRUCTIONS FOR INSTALLATION WHICH MUST BE CAREFULLY FOLLOWED. THE INSTRUCTIONS ARE WORDED IN SUCH A MANNER TO ASSUME THAT THE INSTALLER IS CAPABLE OF COMPLETING THESE TYPE OF ELECTRONIC INSTALLATIONS. IF YOU ARE UNCLEAR AS TO WHAT YOU ARE INSTRUCTED TO DO OR BELIEVE THAT YOU DO NOT UNDERSTAND THE INSTRUCTIONS SO AS TO PROPERLY AND SAFELY COMPLETE THE INSTALLATION YOU SHOULD CONSULT A TECHNICIAN WHO DOES HAVE THIS KNOWLEDGE AND UNDERSTANDING. FAILURE TO FOLLOW THESE INSTRUCTIONS CAREFULLY AND TO INSTALL THE INTERFACE AS DESCRIBED COULD CAUSE HARM TO THE VEHICLE OR TO SAFETY SYSTEMS ON THE VEHICLE. INTERFERENCE WITH CERTAIN SAFETY SYSTEMS COULD CAUSE HARM TO PERSONS AS WELL. IF YOU HAVE ANY QUESTIONS IN THIS REGARD PLEASE CALL THE HELP LINE OR THE METRA AT 1-800-221-0932 FOR ASSISTANCE.

DESCRIPTION

This document will go over the aspects of the XIA device in relation to the 2 (two) Chrysler radio types (the high-end model and the low-end model). The XIA connects an IPOD and/or an XM receiver to allow radio control to each of those devices. A separate LCD display module can also be utilized to give more information to the user.

PORT OVERVIEW

- 1) This port is used with the optional XIA-LCD display.
- 2) This port is used with the XM cable XIAH-XMC or the AUX IN cable XIAH-RCA.
- 3) This port is used with the IPOD cable XIAH-IPC or the AUX IN cable XIAH-RCA.

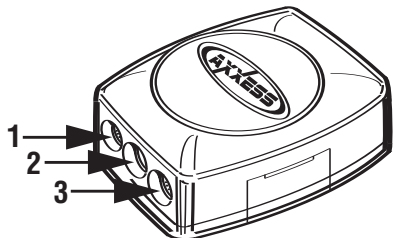

1

XIA DEVICE

The XIA device will imitate and act as either a SDARS (Sirrus) device or as an external CD changer. Both the high-end & low-end radios can see the XIA as a SDARS device. Only the high-end radio can see the XIA as an external CD changer. The cable between the XIA & the radio is what determines what kind of device the XIA will be treated as.

XIA INITIALIZATION ON HIGH-END RADIOS (ACTS AS EITHER A SDARS DEVICE OR AN EXTERNAL CD CHANGER)

This section will go over how to initially set up the XIA to work in conjunction with the radio.

- **Step 1** – Connect the XIA to the radio using the proper cable adapter.
- **Step 2** – Connect all devices to the XIA that are to be utilized.
- The far left connector is to be used for an external remote LCD display interface.
- The center connector may be used for a satellite receiver or an external audio device.
- The far right connector is to be used for an IPOD unit connection.
- **Step 3** – Turn on the radio. Press the **mode** button once. It should display 'SIR RUS' or 'EXT DISC' on the radio. Stay here for at least 7 seconds while the XIA searches for an XM device on its center port. If something is found, it will display it and play it accordingly.
- **Step 4** – Press the **AM/FM** button which will leave the **XM** mode. Wait here for at least 3 seconds. Now press the **MODE** button once again, the XIA will now search for a device on the IPOD port. If it finds one, it will display the results and begin playing it after a few seconds. Now press the **AM/FM** button one final time to finalize everything.
- This should all that be necessary to setup the XIA device for a given radio.

In order to switch between using the XM port & the IPOD port, leave the current mode by pressing the **AM/FM** button. Then press the **MODE** button and the XIA port will now use the other port. If only the XM or the IPOD are used, then by pressing the **MODE** button, the only available XIA device will be utilized.

2

XIA INITIALIZATION ON LOW-END RADIOS (ACTS AS A SDARS DEVICE)

- **Step 1** – Connect the XIA to the radio using the proper cable adapter.
- **Step 2** – Connect all devices to the XIA that are to be utilized.
- The far left connector is to be used for an external remote LCD display interface.
- The center connector may be used for a satellite receiver or an external audio device.
- The far right connector is to be used for an IPOD unit connection
- **Step 3** – Turn on the radio. Press the **mode** button until th radio screen shows 'SIRRUS'. This should be the mode just past the internal CD changer mode. Stay here for at least 7 seconds while the XIA searches for a device on its XM port. If something is found, it will display it and play it on the speakers.
- **Step 4** – Cycle through all modes by pressing the **MODE** button on the radio until the radio displays 'SIRRUS' once again. Remain on this screen for a few seconds. The XIA is now looking for a device on its IPOD port. If an IPOD is attached, it should begin playing.

This should be all that is necessary to setup the XIA device.

To change through the radio modes in order to get to the **IPOD & XM TUNER**, simply press the **MODE** button.

The rotation will look like the following :

If both IPOD & XM Tuner utilized: AM > FM > INT CD CHANGER > IPOD > AM > FM > INT CD CHANGER > XM TUNER....

Or if only 1 device:

AM > FM > INT CD CHANGER > IPOD > AM > FM > INT CD CHANGER > IPOD....

BROWSING MODE WHEN USING XIA AS A SDARS DEVICE

The IPOD allows the use of the **browsing** mode to select a given group of items to listen to. The XIA allows the selection of songs to be played by **PLAYLIST, ARTIST, ALBUM, or GENRE**. In order to invoke the **browse** mode, press the '2' preset button. Use the '1' (▼) or '5' (▲) buttons to select the next

Continued on page 4

3