

## Mercedes SLK CAN Hub Tech Tip

On SLK Models, if you do not have a 2-pin can hub in the passenger kick you will follow the steps below.

**Step 1.)** Locate the Audio Gateway (Underneath the carpet on the passenger side floorboard)

**Step 2.)** Locate the connector shown below, this is also where the fiber lines are located. *(Figure A)*

**Step 3.)** Cut the 2-Pin connector off of the **Lead 1430** harness that was included with the kit. *(Figure B)*

**Step 4.)** Splice the Blue wire in to the brown/red wire in Pin 2 of the connector shown below. ***(Do not cut the wire in pin 2)***

**Step 5.)** Splice the White wire in to the brown wire in Pin 4 of the connector shown below. ***(Do not cut the wire in pin 4)***



Figure B

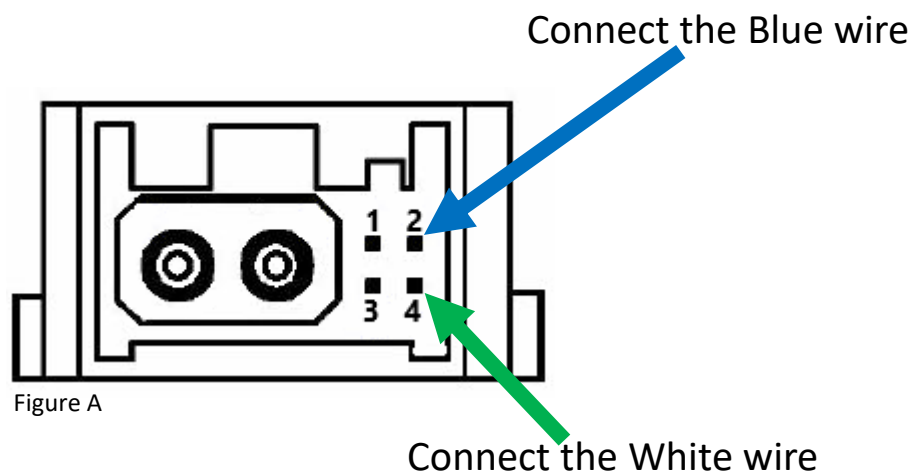


Figure A