



- IBR139 comes with a universal USB snap in housing pre-installed on the main USB housing.
- Vehicle-specific adapters for Honda, Mitsubishi, Nissan, and Toyota included in this kit.

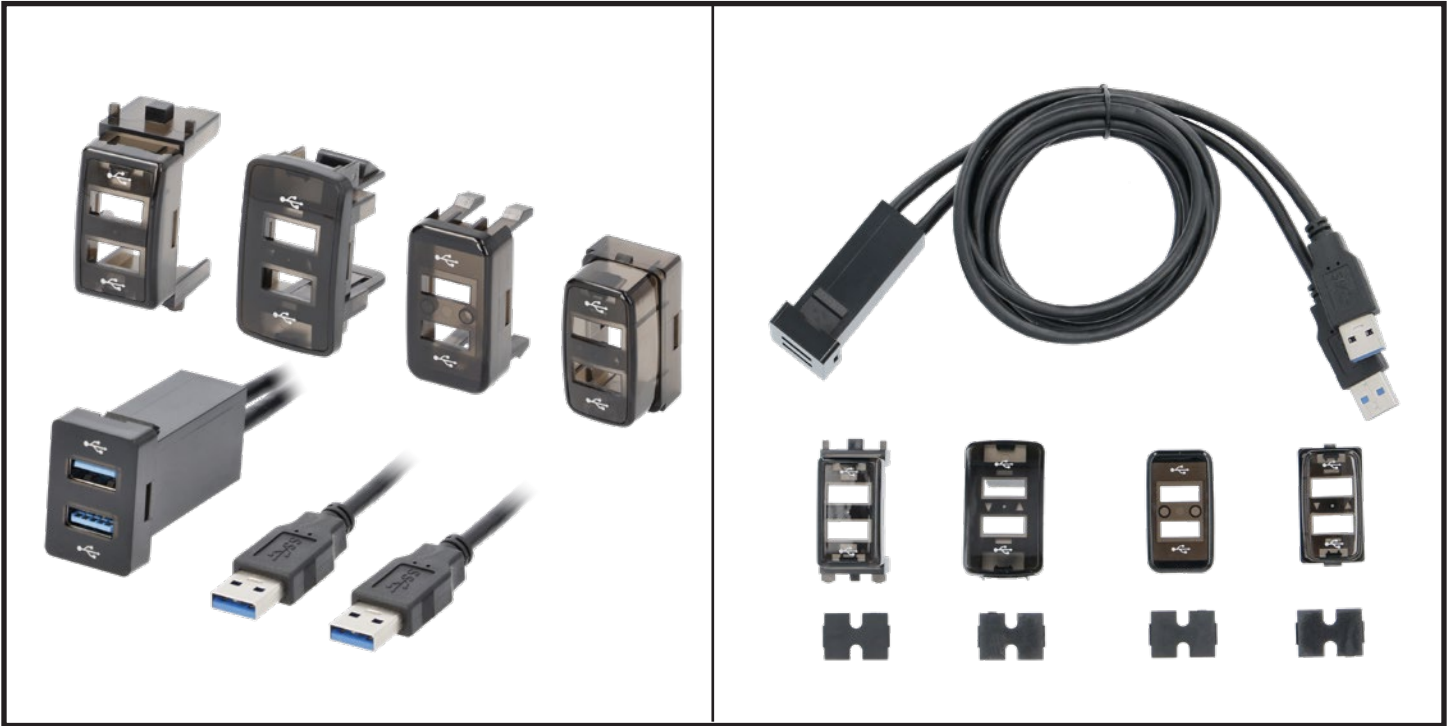


Instructions

In order to insure proper fitment of the vehicle-specific covers you must remove both the front and back covers.

Step 1: Using a pick or pry tool remove the outside USB housing.

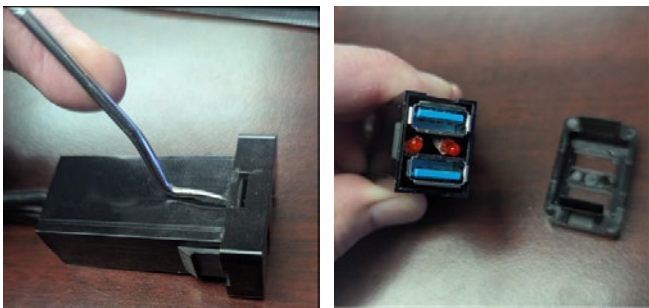

Step 2: Using a pick or pry tool remove the back cover of the USB housing.

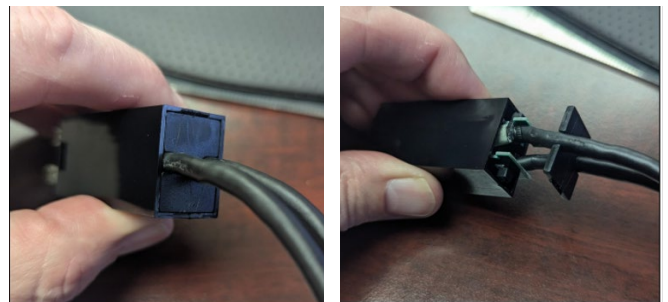

Step 3: Remove the back cover from the the USB wires



Step 4: Each vehicle specific application comes with a new back cover. The back covers extend the UBS circuit board out of the main housing so they line up properly with new USB cover.



Step 5: Place the back cover flush to the USB circuit boards, push in snapping the back cover in place.



Step 6: Snap the front USB cover in place, be sure that the side clips snap into the main housing (might need more force than normal).



Step 7: You are ready to install it into the vehicle.



Having difficulties? We're here to help.

Contact our Tech Support line at:
386-257-1187

Or via email at:
techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM