

#### INTERFACE COMPONENTS

- AXDSPX-CH3 interface
- AXDSPX-CH3 interface harness
- AXDSPX-CH3 vehicle T-harness
- Bass knob

## **APPLICATIONS**

Visit AxxessInterfaces.com for current application list

# Chrysler **DSP Interface with Pre-Wired Harness 2011–2020**

## **INTERFACE FEATURES**

- Designed for both amplified and non-amplified models
- Includes a DSP (Digital Signal Processor)
- Selectable 31 Band Graphic EQ or 5 Band Parametric EQ
- 10 individually assignable outputs
- Independent equalization on each of the 10 outputs
- Independent high pass, low pass, and band pass filters
- Each channel can be delayed independently up to 10ms
- Retains U-Connect voice prompts

(Features continued on next page)

www.MetraOnline.com

MetraOnline.com may be used to assist with dash assembly instructions. Simply enter your Year, Make, Model vehicle into the vehicle fit guide and look for the Dash Kit Installation Instructions.



## **TABLE OF CONTENTS**

nstallation & Installation Options	2
onnections	3-4
lobile App: Quick Setup	5-6
pecifications	7

## **TOOLS & INSTALLATION ACCESSORIES REQUIRED**

- Crimping tool and connectors, or solder gun, solder, and heat shrink
   Tape
   Wire cutter
- Zip-ties Multimeter

#### Google Play Store

**Apple App Store** iOS 12.1 or higher



ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product.

NOTE: Refer also to the instructions included with the aftermarket accessory before installing this device.

## INSTALLATION OPTIONS

## Adding a subwoofer to a factory system:

This feature offers the ability to add a subwoofer to a factory system, whether amplified or nonamplified (Refer to **Page 3**)

## Adding a full-range amp and subwoofer to a factory system:

This feature offers the ability to add a full-range amp and sub to a factory system, whether amplified\*or non-amplified. (Refer to **Page 4**)

\* For amplified models the amp must be bypassed/unplugged, and With OE Amplifier chosen in the Configuration tab under Vehicle Type. Use either Axxess AXABH-CH2 or AXABH-CH4 (sold separately) to bypass the amp for best results.

**Note:** The interface provides a 12-volt 1-amp output to turn on aftermarket amp(s). If installing multiple amps, an SPDT automotive relay will be required if the amp turn-on current of all amps combined exceeds 1-amp. Use Metra part number E-123 (sold separately) for best results.


## FEATURES CONT.

- · Adjustable chime level
- Easy behind the radio installation with pre-wired harness
- Bass knob included for level control of subwoofer amp
- Settings adjusted via Bluetooth® in a smart device application (tablet or mobile phone), compatible with both Android and Apple devices
- Read, write, and store configurations for future recall
- Password protect feature available in the mobile app
- Micro-B USB updatable


## **INSTALLATION**

- 1. Disassemble the dash, unplug all connectors, and then remove the factory radio.\*
- Install the AXDSPX-CH3 vehicle T-harness to the vehicle and make all necessary connections, but leave the amp turn-on wire disconnected.
- 3. Plug the AXDSPX-CH3 vehicle T-harness to the AXDSPX-CH3 interface.
- 4. Plug the AXDSPX-CH3 interface harness to the AXDSPX-CH3 interface.
- 5. Download and install the AXDSP-XL app from the Google Play Store or Apple App Store.
- **6.** Open the app then select the **Bluetooth® Connection** tab. Follow the instructions to pair the mobile device to the interface. Refer to **Page 5** for more information.
- Scroll to the Configuration tab then select the vehicle type. Press the Lock Down\*\*
  button to save the configuration. Refer to Page 6 for more information.
- 8. Connect the amp turn-on wire.
- **9.** Adjust the settings in the app as desired. Press the **Lock Down** ‡ button to save any new configurations.
- \* For dash disassembly instructions, refer to metraonline.com. Enter the year, make, and model of the vehicle in the Vehicle Fit Guide and find instructions under Metra Radio Install kits.
- \*\* Anytime the interface is locked down the key must be cycled off then back on.

# **ADDING A SUBWOOFER TO A FACTORY SYSTEM**

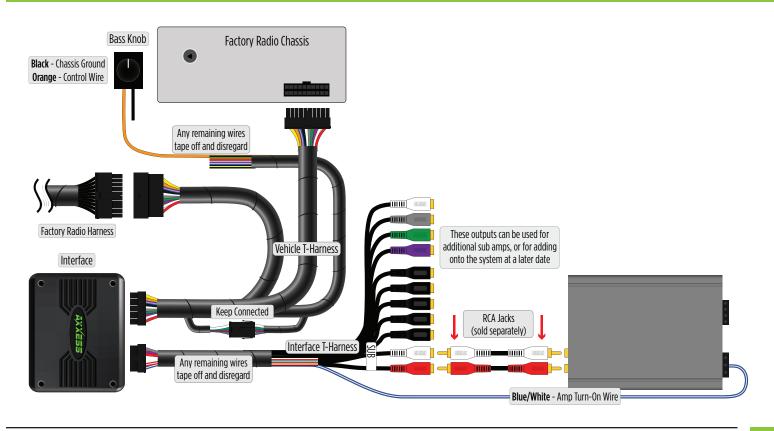

# ADDING A FULL-RANGE AMPLIFIER & SUBWOOFER TO A FACTORY SYSTEM

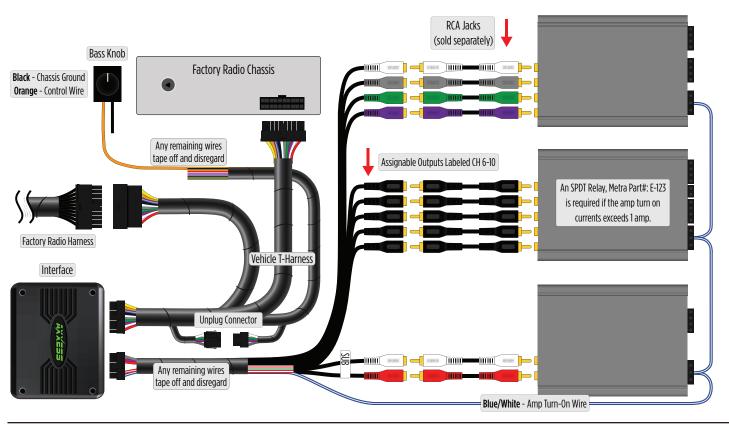

# MOBILE APP: QUICK SETUP STEPS THROUGH AXDSP-XL APP


# Google Play Store 1.



Apple App Store iOS 12.1 or higher



- Download and install the AXDSP-XL app from the Google Play Store or Apple App Store.
- Turn Vehicle Ignition on. Make sure the Remote Turn on lead is disconnected.
- **3.** Open the app: Select **Bluetooth Connections** page.
  - Select Scan, all available AXDSP devices within range will be displayed.
     Select your AXDSP and hit connect. (Figure A)
- **4.** Select the Configuration page.
  - Select Vehicle Type Icon
  - Select the Vehicle Make: (Example: **DODGE**)
  - Select the Vehicle's model: \_\_\_\_\_ (Example: DURANGO)
  - Select With OE Amp or Without OE Amp
  - Hit Apply (Figure B)
- **5.** Make sure radio volume is all the way down.
- **6.** Connect the amp turn-on wire from the **AXDSPX-CH3 T-harness** to the aftermarket amplifiers.

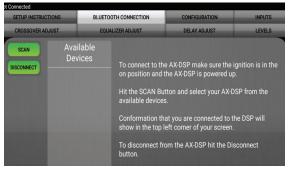

(Figure A)




(Figure B)

# MOBILE APP: QUICK SETUP STEPS THROUGH AXDSP-XL APP (CONT.)

- From the Configuration page click the Identify button to confirm that the AXDSPX-CH3 is connected properly. If so, a chime will be heard from the front left speaker.
- **8.** Press the **Lock Down** button to save the configuration. (Do not turn ignition off until this process is completed) (Figure C)
- **9.** Select the **Bluetooth Configurations** page and disconnect the DSPX.
- **10.** Turn ignition off, close all door then lock vehicle using the key fob. The vehicle will need to sit uninterrupted for 10 minutes while the vehicle goes to sleep. (Make sure Key fob is 15 feet away from the vehicle)
- **11.** Unlock Vehicle, turn ignition on and test radio's functions.
- **12.** Adjust the DSP settings in the app as desired. Refer to the instructions under the **Setup Instructions** tab, or online at **Axxessinterfaces.com** for an explanation of each tab in the app.

## **Locking Down Data**

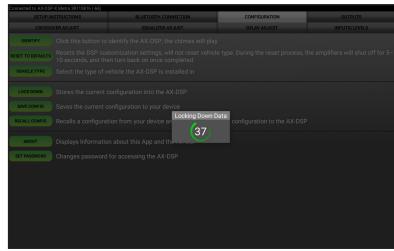

(Figure C)

Last and the most important:

You MUST lock down your configuration and cycle the key!!!

# **SPECIFICATIONS**

# **Specifications**

Input Impedance 1M 0hm

Input Channels 6 High/Low level Selectable
Input Options High Level or Low Level
Input Type Differential-Balanced

Input Voltage

High Level Range 0 - 28v Peak to Peak
Low Level Range 0 - 4.9v Peak to Peak

Ouput Channels 10

Output Voltage Up to 5v RMS
Output Impedance 50 Ohms

Equalizer Type 31 Band Graphic EQ, +/- 10dB

THD <0.03% Frequency Response 20Hz - 20kHz

Crossover Type 3-Way LPF, BPF, HPF THP per channel Linkwitz-Riley 24DB Slope, Fixed

Sampling 48kHz

S/N Ratio 105dB @ 5V RMS

## General

Operating Voltage 10 - 16VDC
Standby Current Draw -7mA
Operation Current Draw -150mA

Adjustments/Controls Application via Bluetooth

Remote Output 12VDC, Signal Sense or with Ignition



Having difficulties? We're here to help.



Contact our Tech Support line at: **386-257-1187** 



Or via email at: techsupport@metra-autosound.com

# **Tech Support Hours (Eastern Standard Time)**

Monday - Friday: 9:00 AM - 7:00 PM Saturday: 10:00 AM - 5:00 PM Sunday: 10:00 AM - 4:00 PM



Metra recommends MECP certified technicians