


### H-D Ultra Limited Rear Speaker add on harness

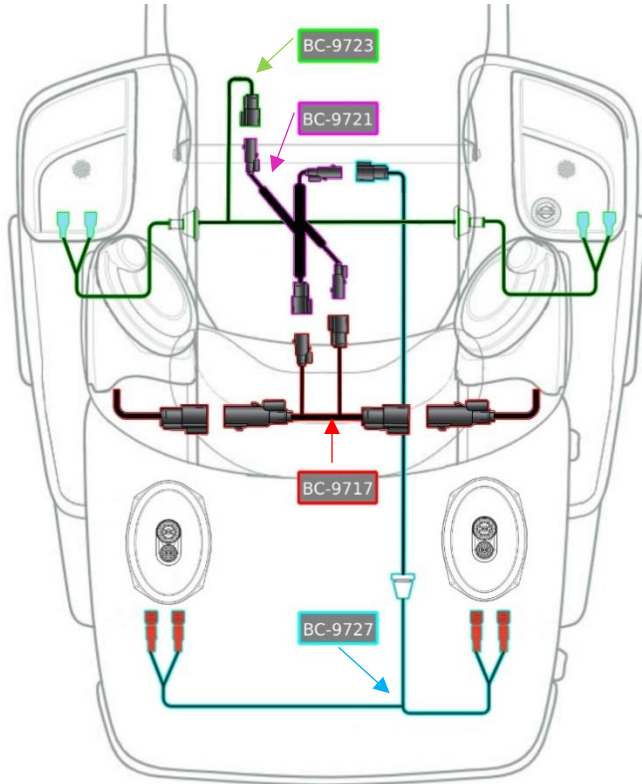

***This installation takes place at rear of the seat, and Tour-Pak.***

1. Remove seat, according to the owner's manual for Motorcycle.
2. Pull up cover exposing the Factory Tour-Pak harness, disconnect the factory harness and insert the BC-9717 to their factory mates.



**NOTE:** The following harnesses are sold separately, and are designed to use with the BC-9717.

3. Connect the BC-9721 to the BC-9717 "FROM FRONT", and the connecting mate labeled "TO SPEAKER". This will restore sound to the factory rear speaker pods.
4. When adding bag lid speakers, use the BC-9723 connected to the output of the BC-9721.
5. When adding Tour-Pak lid speakers, use the BC-9727 connected to

**NOTE:** To add a single rear amp to the rear OE speakers, use the included harnesses labeled ("Input", White connector) and ("Output", Black Connector) connected to the amplifiers input and output.

