


H-D Touring, Accessory T-Harness



This installation is inside Front Fairing.

For instructions on how to remove fairing, please reference the [BC-HDR-K1](#).

1. With front fairing removed locate the factory harness on the Brake side, near speaker pod.
2. Disconnect harness or remove rubber plug cover from the factory accessory harness.
3. Plug the BC-9718 into the factory connector, and reconnect the existing connector mate or dust cover.

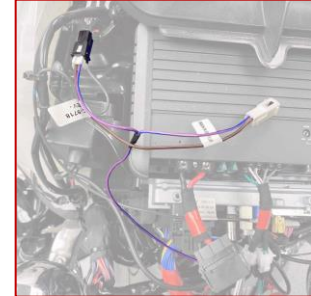

4. The red connector will provide a switched +12VDC power output for connecting accessory device.

NOTE: 2 amps MAX draw, anything more than that will need relay isolated. We recommend using Metra PN: IBW-E123H Waterproof relay and harness.

5. Complete install by securing all wires, and reinstalling the front fairing.