


2014+ Lower vent fairing LED w/signal indicator



1. Remove outer fairing
For detailed instructions use [BC-HDR-K1](#)
2. Locate the left and right signals, and install t-harness inline.

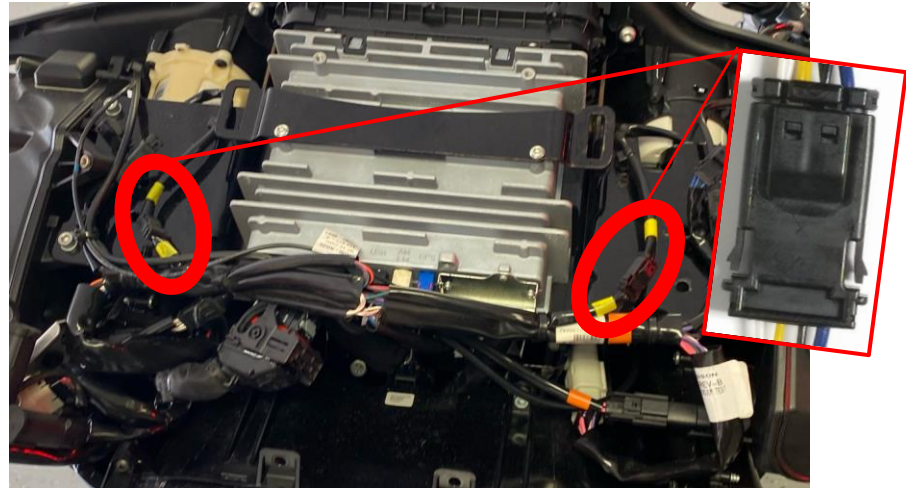

WHAT'S IN THE BOX

1. Lower fairing inserts
2. Lighting t-harness
3. Wire management

Having difficulties?

Contact our tech support line at:
Techsupport@metra-autosound.com
Or via phone at:
368.257.1187

TECH SUPPORT HOURS (EST)

Monday-Friday: 9:00AM - 7:00PM
Saturday: 10:00AM - 7:00PM
Sunday: 10:00AM - 4:00PM

- From the rear of the lower fairing remove the (2) bolts, lift off grille from outer rim towards the motorcycle using non-marring pry tools.



NOTE: Bolts are different lengths, place back into same location removed from.

- Route all wires from upper fairing, clearing any pinch points or triple tree locks on the brake and clutch sides with supplied wire management hardware.
- Line up mounting tabs of the new lighted grille, and snap insert into place. Reinstall mounting bolts into on backside of lower fairing.
- Connect lower vent lights, it is recommended to resync the signals before use. To perform sync, follow these steps.
 - Cycle ignition on, activate 4-way flashers (leaving them on), cycle the ignition off. All 4-way flashers to run for about 3 minutes. Cycle ignition back on, deactivate 4-way flashers, cycle ignition off.
- Test operation of all lights prior to riding after installation.

