



Recommended harness (NOT included)

HE-DLWH1

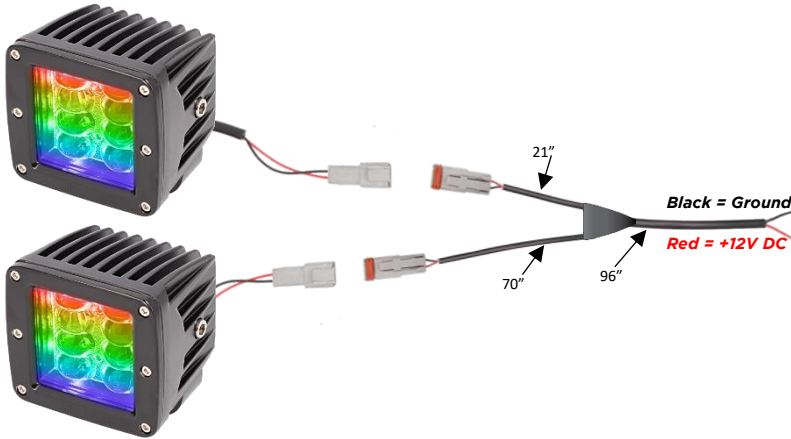


How to wire up switch and relay, if not using pre-wired harness. using an ATFH14C-10, IBR30 and HE-RRS.

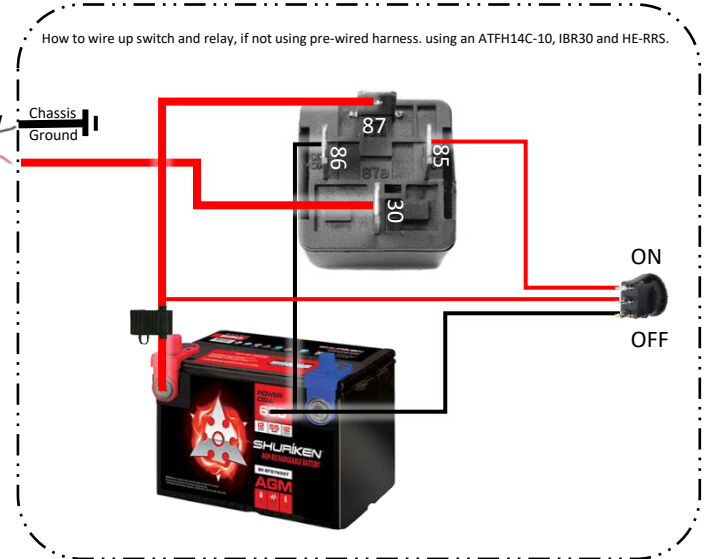

Tools Needed

- 4mm Allen Key
- 13mm Socket
- 5/16" drill bit

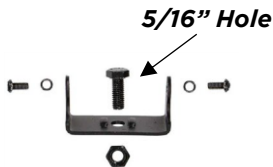

Heise Connect app: Scan QR code to download HEISE Connect app.

NOTE: Set pixel count to 30 for all cube lights



How to wire up switch using IBRRS and LPR-04B-I-12R.



Black wire - Ground
Red wire - Power wire (+12VDC)
Green wire - Left signal (+12VDC)
Yellow wire - Right signal (+12VDC)
White wire - Brake light (+12VDC)

