



## Polaris **RZR PRO XP 2020-UP**

Visit [metrapowersports.com](https://www.metrapowersports.com) to view the available installation parts and ATV/UTV accessories.

### **KIT FEATURES**

---

- Unloaded Subwoofer enclosure for Polaris® PRO XP
- Enclosure mounted in dash on passenger side
- Constructed of durable and UV protected HDPE
- Mounting hardware included
- Fits 10" speakers
- 1-year limited warranty
- Internal volume: 0.59 Ft<sup>3</sup>

### **WHAT'S IN THE BOX**

---

- 10" Subwoofer enclosure
- Roll bar clamp
- (2) Torx, M6 x 1.0mm x 40mm
- (2) Speed nuts
- (3) M6 x 12 Machine screws

### **Having difficulties?**

---

Contact our tech support line at:  
**Techsupport@metra-sutosound.com**


Or via phone at:  
368.257.1187

### **TECH SUPPORT HOURS (EST)**

---

Monday-Friday: 9:00AM - 7:00PM  
Saturday: 10:00AM - 7:00PM  
Sunday: 10:00AM - 4:00PM

Closed for most US Federal Holidays

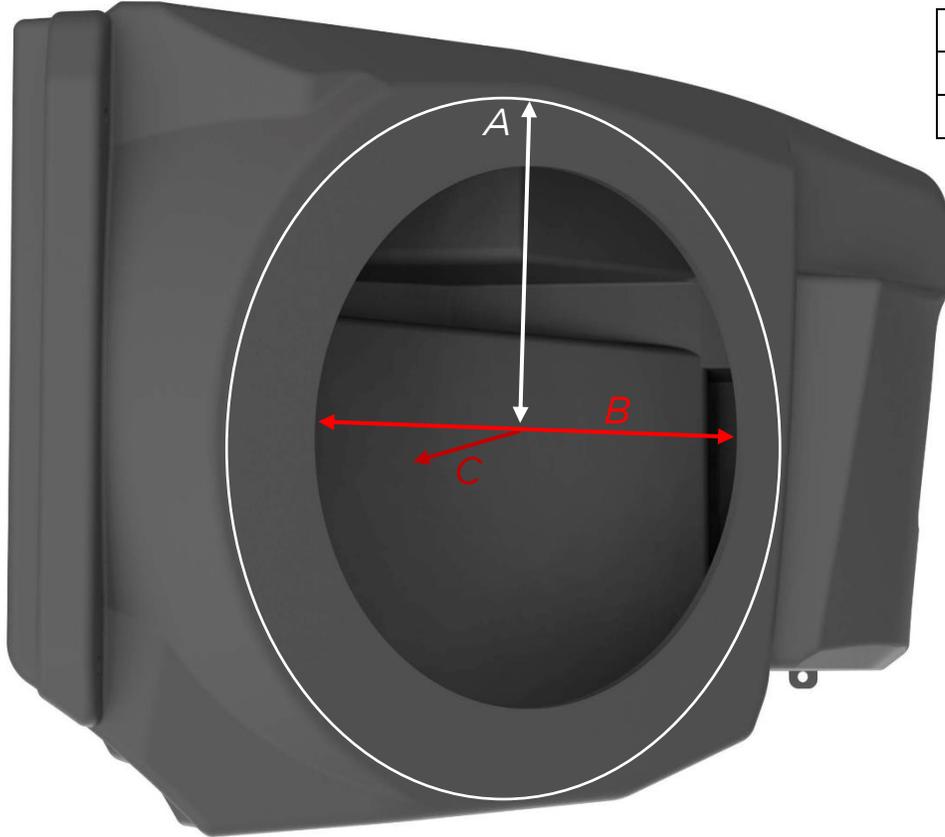


A	12" mounting surface
B	9 <sup>5</sup> / <sub>16</sub> " Opening
C	6.5" Mounting depth

**2020-UP RZR PRO XP**


1. Remove two (2) T-40 TORX bolts and lift off hood.




2. Remove two (2) T-40 TORX bolts located under hood holding dash in place.

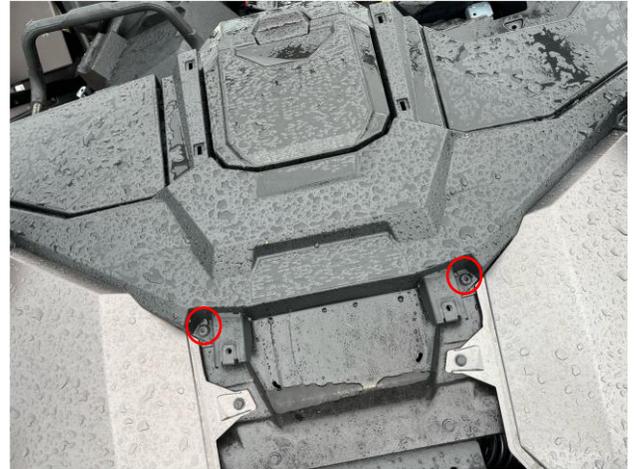

3. Remove remaining TORX bolts and panel clips holding on the front fenders.

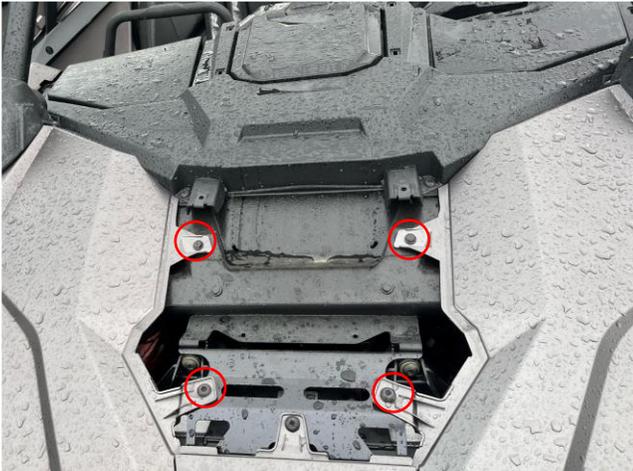

4. Using a soft pry tool, remove the gray trim panels from the dashboard.

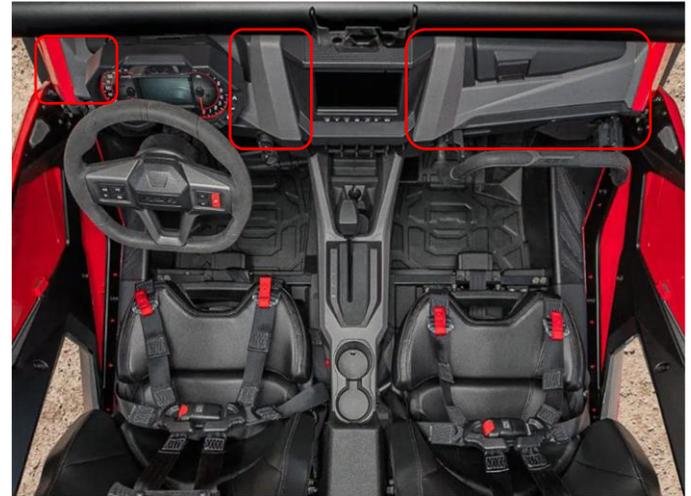

5. Using both hands, lift up on the tweeter housing. Sliding it up the cage. Repeat on passengers side.



6. Remove (4) T-40 bolts from dash panel on the drivers side of the vehicle.



9. From the passengers side, remove the (7) T-20 TORX bolts remaining bolts. *NOTE: The glovebox is lost with installation of sub-enclosure*



8. Pull up fender panels, but do not detach from chassis. Allow fenders to rest open.



9. Gently pull up on the fenders to remove the locating clips, repeat with the other fender.




10. Once panel is free, lay panel to the side.




**Top-Down view**

11. Locate and remove the under-dash tray support found below the center storage pocket, by removing (5) push clips and (2) T-25 TORX screws on the firewall. If vehicle has factory amplifier installed, unclip harness at connector, and lift out panel.

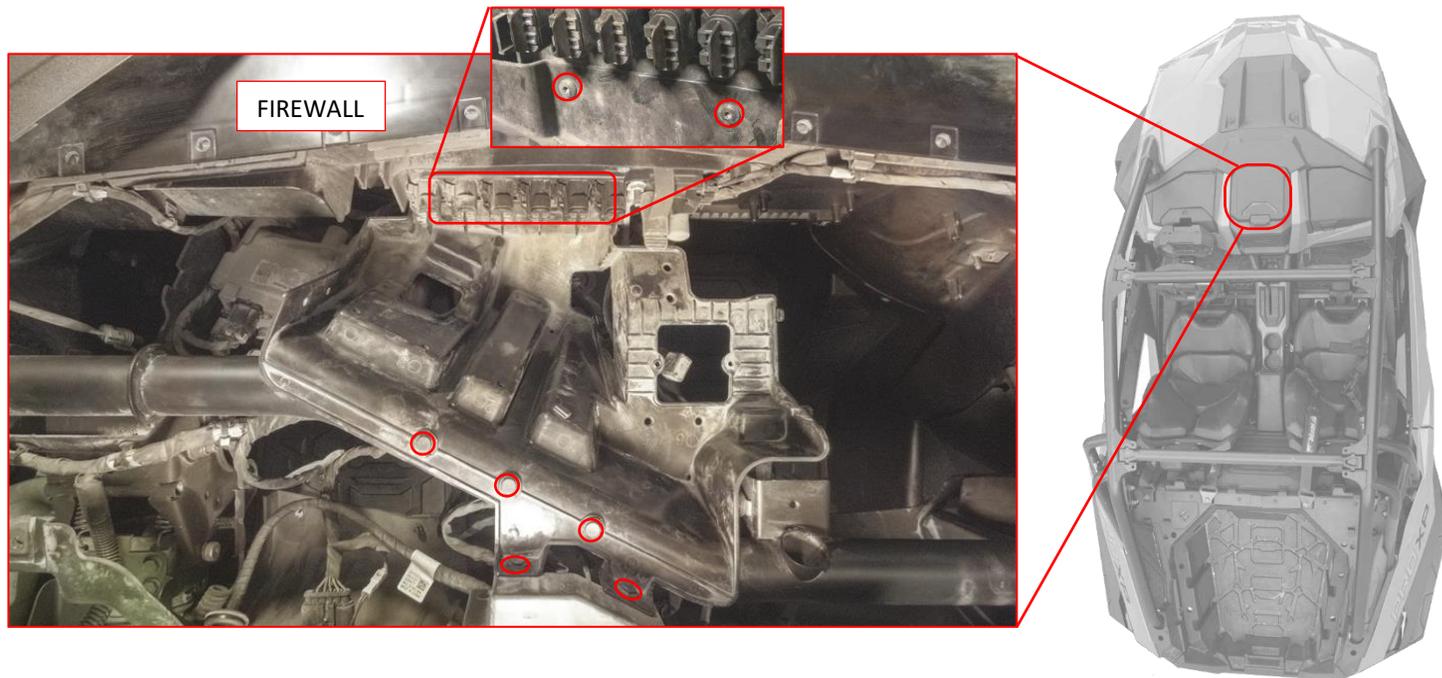

12. Cut and remove shaded area, this will allow the enclosure to fit under-dash.

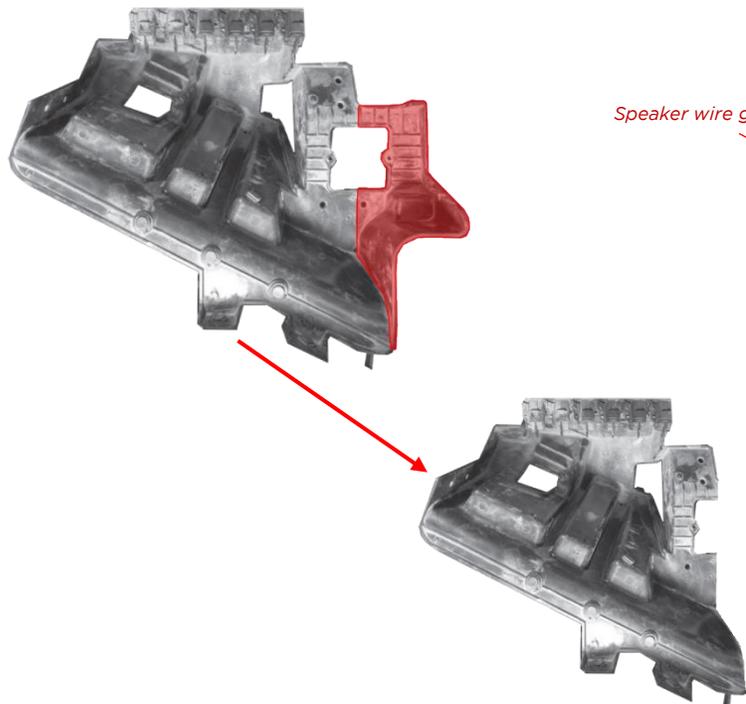

13. Insert speed nuts into molded retainers found in the passengers foot well. These will hold the bottom of the enclosure to the vehicle, using the secure torx screws.



13. Place sub enclosure into footwell area, with the (3) captured nuts facing up. Pull enclosure up from inside dash cavity, secure using M6x12 screws around roll bar.



14. Holding the bottom of the enclosure tight to the firewall, line up speed nuts with enclosure holes. Install two included Torx bolts into speed nuts.
- a. With bottom bolts secure, tighten up the (3) M6x12 screws from previous step.
  - b. Complete install by reinstalling the dash panel, in reverse order of removal.

