

AXSWC | JVC & Kenwood Radio Programming Instructions

Follow the steps below to program JVC and Kenwood radios when installing the AXSWC.

1. Locate the main connector on the back of the radio (Figure A).

NOTE

If you've exhausted every troubleshooting step offered, contact **Technical Support**.



Figure A

2. The SWC wire from the radio can be found in the bundle of wires above the main connector, labeled **REMOTE CONT**. (Figure B)

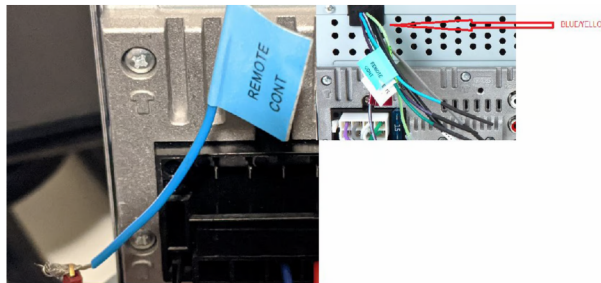


Figure B

WARNING

This installation will require a 10k ohm ¼ watt resistor (sold separately). (Figure C)



Figure C

Installation Instructions

1. Connect one end of the resistor to the **Blue/Yellow** wire from the radio.
2. Connect the other end of the resistor to the Brown wire from the **3.5mm adapter** included with the AXSWC (Figure A).




Figure A

3. Proceed with programing the steering wheel controls according to the vehicle specific instructions.
4. Once the AXSWC interface indicates the correct radio is programmed (5 LED flashes), remove the resistor.
5. Reconnect the **Blue/Yellow** and **Brown** wires without the resistor in place (Figure B).

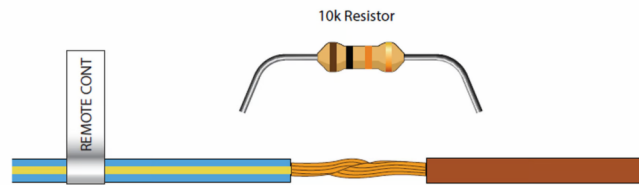


Figure B

6. Test the steering wheel controls for proper functionality.

The installation is complete.

Manual Programming

1. Program the interface to the vehicle following the vehicle specific instructions.
2. Turn the radio **off**.
3. Cycle the key **off**, then back **on**. (**continued on Page 3**)



Manual Programming (cont.)

4. Wait until the interface's light flashes **Green** once, then goes out.



5. Press and hold the **Volume Down** button on the steering wheel.

Hold Volume Down



6. Hold **Volume Down** until the interface's LED turns solid **Red**, then release.



7. The LED will then go out indicating that the interface is now in **Changing Radio Type** mode. (continued on Page 4)

Manual Programming (cont.)

8. Press and hold the **Volume Up** button on the steering wheel until the interface's light turns solid **Red**, then release.

Hold Volume Up



Radio 1 has been programmed.

NOTE

Repeat this step four additional times (total of five).

9. Press and hold the **Volume Down** button on the steering wheel until the interface's light turns solid Red. The light will remain solid **Red** for 3 seconds while it stores the new radio information.



10. After the LED goes out, turn the radio on and test the steering control wheel controls.

The installation is complete.