

# Saddle Tramp<sup>®</sup>


## BC-HDD69-14U | Limiting strap Template

### Drill Template Instructions


Tool Needed
<ul style="list-style-type: none"><li>• Scissors</li><li>• Masking tape (Metra PN: <a href="#">TAPE34</a>)</li><li>• #2 Phillips<sup>®</sup> screw driver</li><li>• 3/32" Drill bit</li></ul>




1. Print out drilling template, do not reduce or modify the print setting in the PDF. If so the template will not line up as designed.

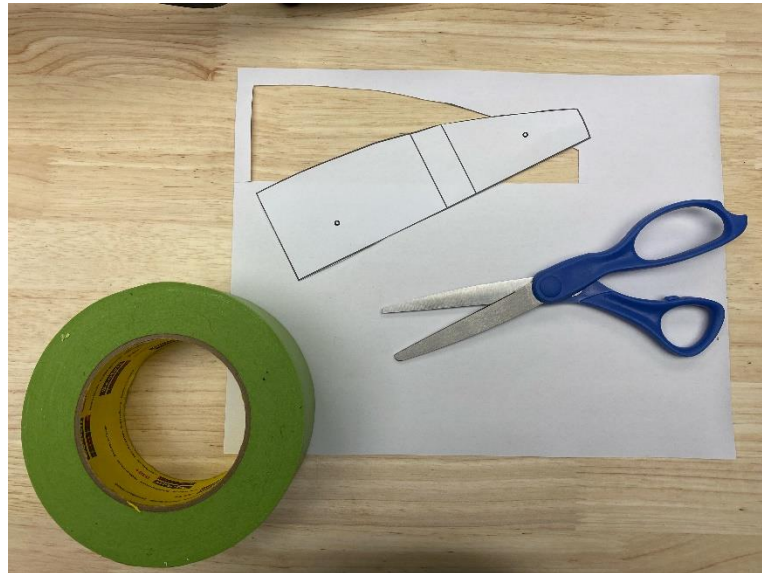

2. Carefully cut out template, and (4) small pieces of masking tape.

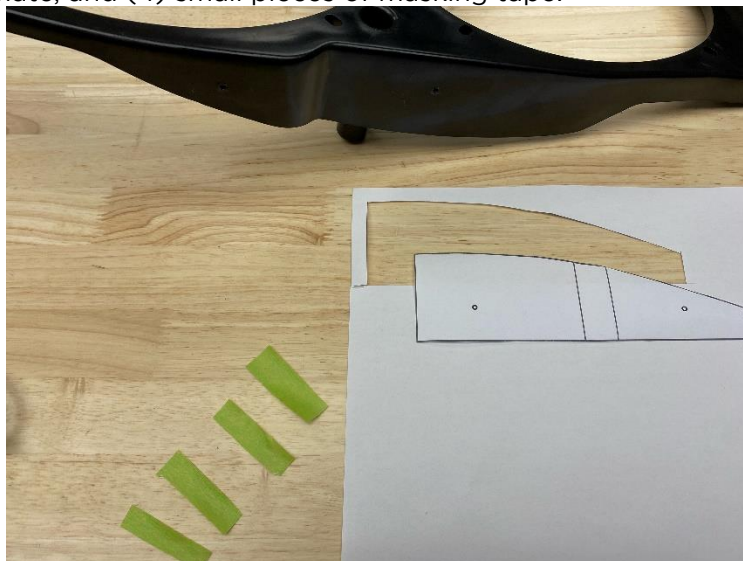

3. Lineup Template to outside edge of speaker assembly. Follow taper until the two lines, meet the contour of the speaker assembly. Starting at the front, tape down as seen in photo.

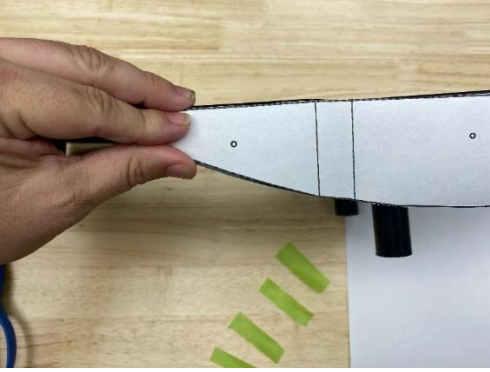

4. Using a 3/32" drill bit, drill out the centers of 2 holes of the template.



5. Using supplied screws, mount the limiting straps to the bar from the factory strap.



