



H1/H3/H4/H7/H13/9004/9007

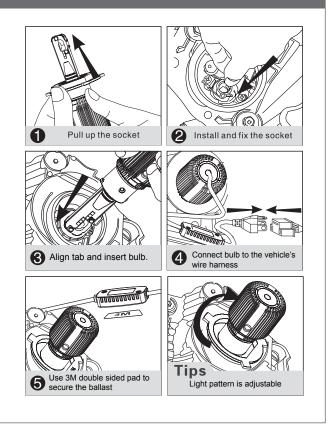


ALIGNMENT *feature not available on all models

For the best beam pattern, it is recommended to adjust the bulb so that the stem is perpendicular to the surface.



H8/H9/H11/H16JP/P13/880/881/9005/9006/PSX24/PSX26

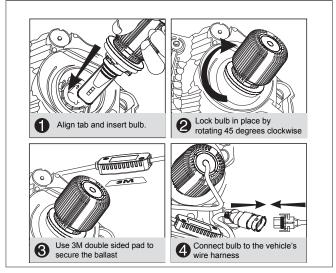

After installation of LED bulbs, adjustment of the headlamp assembly may be required to achieve proper beam pattern. Adjust headlamp assembly in accordance with vehicle's operating manual.

Keep your original factory bulbs so that you can replace them for use on public roads. Keep the box that the new bulbs came in to store the bulbs and be sure to handle them with care when removing and re-installing.

NOTE: Some vehicles may require a Canbus adapter to stop flashing/pulsating of bulbs or a lamp out messages in the instrument cluster. These can be purchased separately at your local Metra retailer.



WARNING: THIS LIGHTING PRODUCT IS SOLD FOR OFF-ROAD USE ONLY. This product should not be used on the road. Keep your original factory bulbs so that you can replace them for use on public roads. Keep the box that the new bulbs came in to store the bulbs and be sure to handle them with care when removing and re-installing.

TECH SUPPORT

386-257-1187

