



## HE-NIBK2

### 50" Straight LED Light Bar Mount

#### 2004-2014 Nissan Titan

**NOTE:** Please read instructions before beginning installation. Check all of the kit's hardware to ensure it has all the proper contents. Be sure you have all needed parts and know where they go.

**Contents of Kit:** Driver and Passenger bracket, (2) Gaskets, (4) Allen head bolts, (4) Riv-nuts

**Tools Needed:** various drill bits up to 33/64", 3/16" Allen Wrench, 9/16" wrench, 1/2" wrench, Tape Measure, Permanent marker, silicone.

#### **Installation Instructions:**


1. On the passenger side of the truck, measure 2.5" from the top of the windshield seal to the edge of the light bracket. Mark the position of the light bracket.



2. Drill the two holes, starting small, through the sheet metal and ending with the 33/64" drill bit. **NOTE:** Placing a piece of tape on the drill bit about 1/2" from the end of the bit (closer to the drill's chuck) will aid in not drilling too far into the cab of the truck.



3. Take the supplied bolt, washer, and spacer nut and screw them into the riv-nut.

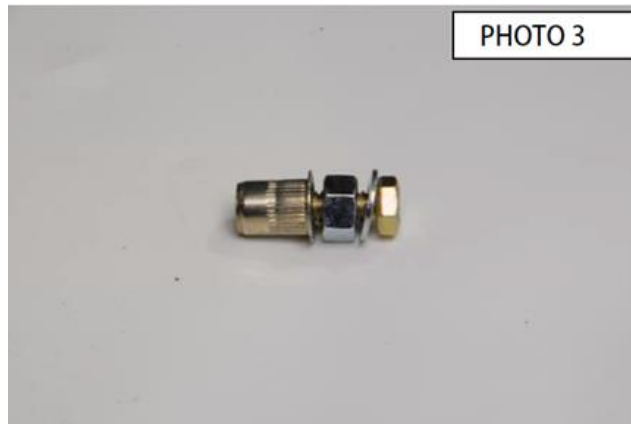

4. Put a bead of silicone around the ribbed area of the Riv-nut and install the assembly into the drilled hole, use a 9/16" wrench to hold the insert in place and use a 1/2" wrench to tighten the bolt. This will lock the threaded insert into place. Repeat on second hole.



5. Place the supplied gasket on the bottom of the light bracket.



6. Use the supplied Allen head bolts to secure the light bracket and tighten with a 3/16" allen wrench.



7. Repeat steps on driver side.
8. Install the Led Light with the supplied light instructions.



**1-800-221-0932**

**[www.heiseled.com](http://www.heiseled.com)**

**460 Walker Street**

**Holly Hill, FL 32117**