

1. Open hood and remove the (6) push pin clips across the top of the grille using a plastic pry tool. (Figure A)
2. Gently lean grille forward to access panel clips at rear bottom of grille. Using a panel pry tool, release grille from clips. (Figure B)
3. Disconnect the left and right turning signal. (Figure C)
4. Remove the (4) T-15 Torx® screws from each headlight retaining ring. New headlights will be secured in place with the factory hardware.(Figure D)
5. Unplug and remove the headlight.
6. Trim off keyway from the factory mounting plate. (Figure E)
7. Connect the included H4 adapter and Canbus decoder to the vehicle harness for each headlight.
8. To install, repeat steps in reverse order.

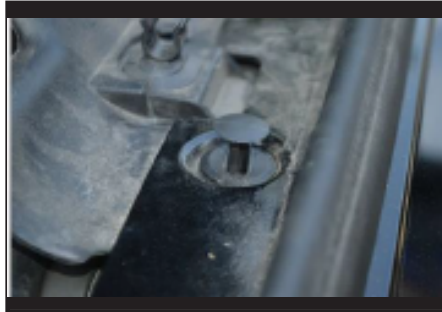


Figure A



Figure B



Figure C



Figure D



Figure E

1. Open hood and remove the (6) push pin clips across the top of the grille using a plastic pry tool. (Figure A)
2. Pressure clips will be the only things holding the grille to the Jeep at this point. Pull from the bottom corner of the grille to release the clips and remove grille. (Figure B)
3. Remove the (3) 10mm bolts from the headlight assembly.
4. Unplug and remove the headlight.
5. Install JP-JLB7 headlight brackets (not included), and plug the H4 to OE adapter into the factory headlight harness (included with JP-JLB7).
6. To install, repeat steps in reverse order.

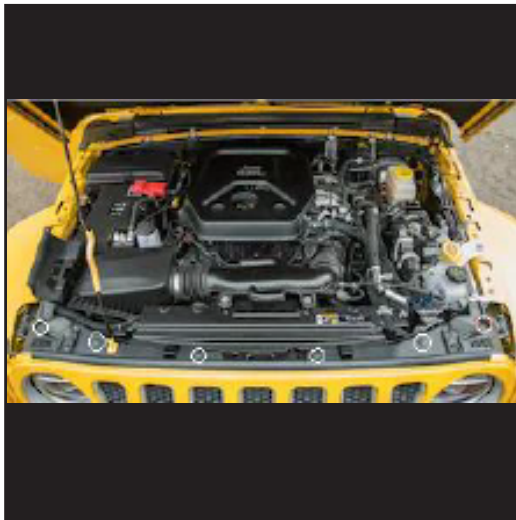


Figure A



Figure B

1. Unscrew the (3) T-15 Torx® screws holding the headlight bezel in place. (Figure A)
2. Remove Headlight bezel, you may need plastic pry tool to unseat bezel. (Figure B)
3. Unscrew the (3) T-15 Torx® screws holding the headlight retaining ring in place. (Figure C)
4. Carefully remove headlight, and disconnect wire harness. (Figure D)
5. To install, repeat steps in reverse order.



Figure A



Figure B



Figure C



Figure D

