## Cadillac **Chime Interface** 1996-2005

### INTERFACE FEATURES

- Provides accessory power (12-volt 10-amp)
- Retains R.A.P. (Retained Accessory Power)
- Provides NAV outputs (parking brake, reverse, and speed sense)
- Used in non-amplified models, or when bypassing a factory amplifier
- Used in models without OnStar® or when not retaining OnStar®
- Retains all warning chimes
- High level speaker input
- Retains balance and fade
- Micro "B" USB updatable

### INTERFACE COMPONENTS

- AXDI-GM3 interface
- LD-LCGM-03 harness

### APPLICATIONS

**Cadillac**

| | | | |
|---|---|---|---|
| Catera | 1997-2001 | Deville* 2000-2005 | Seville 1996-1997 |
| Deville | 1996-1999 | Eldorado 1996-2002 | Seville* 1998-2004 |

*Note: You must bypass the factory amp in these vehicles to use this interface
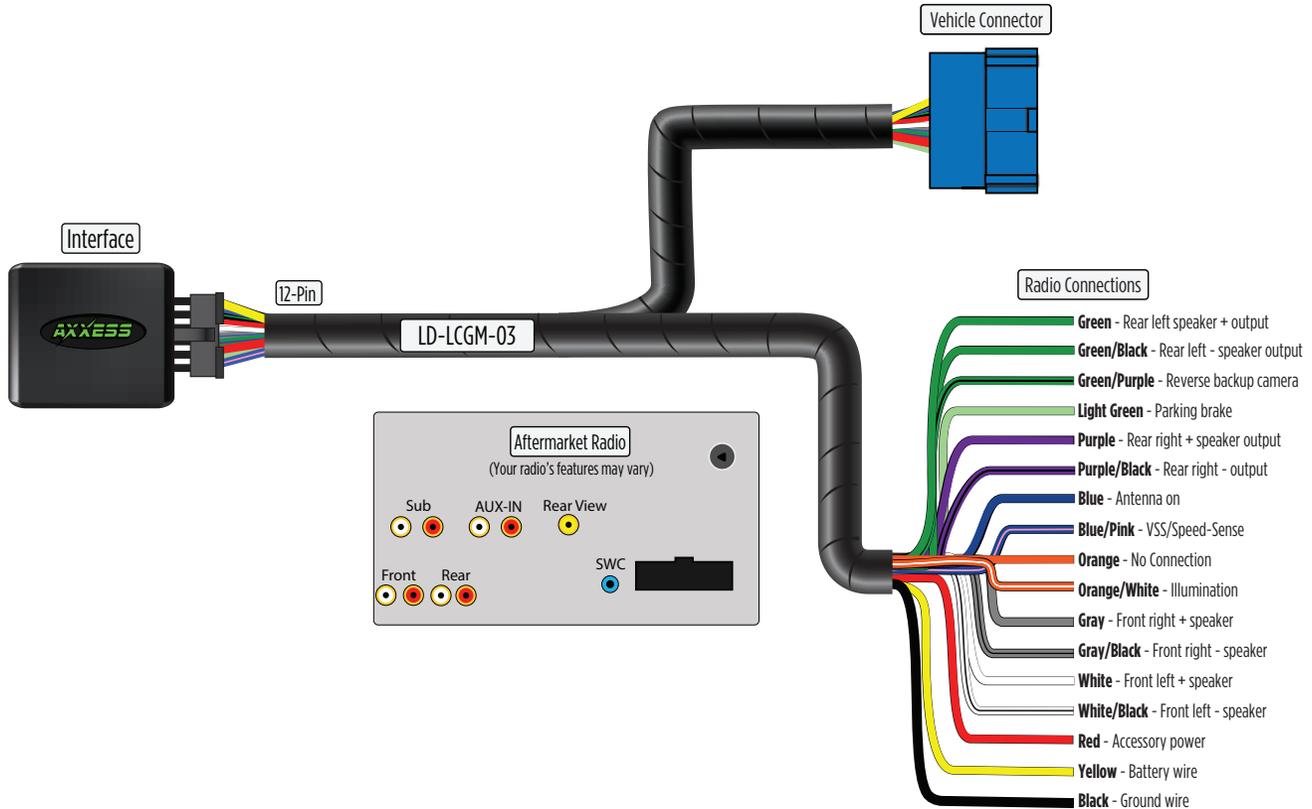
### TABLE OF CONTENTS

### TOOLS & INSTALLATION ACCESSORIES REQUIRED

- Cutting tool • Tape • Crimping tool
- Connectors (i.e. butt-connectors, bell caps, etc.)

Visit **AxxessInterfaces.com**
for more detailed information about the product
and up-to-date vehicle specific applications

**ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product. NOTE: Refer also to the instructions included with the aftermarket accessory before installing this device.**

Vehicle Connector

Interface

12-Pin

LD-LCGM-03

**Radio Connections**

**Green** - Rear left speaker + output
**Green/Black** - Rear left - speaker output
**Green/Purple** - Reverse backup camera
**Light Green** - Parking brake
**Purple** - Rear right + speaker output
**Purple/Black** - Rear right - output
**Blue** - Antenna on
**Blue/Pink** - VSS/Speed-Sense
**Orange** - No Connection
**Orange/White** - Illumination
**Gray** - Front right + speaker
**Gray/Black** - Front right - speaker
**White** - Front left + speaker
**White/Black** - Front left - speaker
**Red** - Accessory power
**Yellow** - Battery wire
**Black** - Ground wire

**Aftermarket Radio**
(Your radio's features may vary)

Sub    AUX-IN    Rear View

Front    Rear

SWC

# INSTALLATION

**With the key in the off position:**

- Connect the **LD-LCGM-03** harness into the interface, and then to the wiring harness in the vehicle.

# PROGRAMMING

**Attention!** If the interface loses power for any reason, the following steps will need to be performed again. Also, if installing an AXSWC connect it after you initialize and test the interface/radio, with the key in the off position.

- Turn the key (or push-to-start button) to the ignition position and wait until the radio comes on.

    **Note:** If the radio does not come on within 60 seconds, turn the key to the off position, disconnect the interface, check all connections, reconnect the interface, and then try again.

- Turn the key to the off position, and then to the accessory position. Test all functions of the installation for proper operation, before reassembling the dash.

Having difficulties? We're here to help.

Contact our Tech Support line at:
**386-257-1187**

Or via email at:
techsupport@metra-autosound.com

## Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM
Saturday: 10:00 AM - 5:00 PM
Sunday: 10:00 AM - 4:00 PM

**KNOWLEDGE IS POWER**
Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.edu or call 386-672-5771 for more information and take steps toward a better tomorrow.

**Metra recommends MECP certified technicians**