

AXFD-USB3 INSTALLATION INSTRUCTIONS



Ford **Edge 2011–2014 USB Media Hub Replacement**

TABLE OF CONTENTS

Connections......2


TOOLS & INSTALLATION ACCESSORIES REQUIRED

Pry tool

KIT COMPONENTS

• A) Auxiliary source input front panel • B) Auxiliary source input back






Product Info





CONNECTIONS

- 1. Using a suitable tool pry off the media hub bezel. (1)
- **2.** Slide the media hub out from the opening. (2)
- **3.** Disconnect the (2) electrical connectors. (3 & 4)
- 1. Take the AXUSB-GM3 and run the cables through the inner housing until all slack is through and you can snap the AXUSB-GM3 into place.
- **2.** Run all cables through the center console to the radio location and plug in desired connectors
- **3.** Snap in the inner housing making sure the arrows are facing up.
- **4.** Put the panel clips on the outer trim and snap it on to the inner housing.

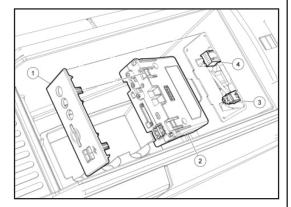

Having difficulties? We're here to help.



Contact our Tech Support line at: **386–257–1187**



Or via email at: techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM Saturday: 10:00 AM - 7:00 PM Sunday: 10:00 AM - 4:00 PM



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians