

## GM Stop/Start Override Interface 2016-Up

### INTERFACE FEATURES

- Allows the override of the STOP/START engine feature
- Can be used with either a factory or aftermarket radio
- No programming required
- Simple 2-wire setup

### INTRODUCTION

The AXSSO-GM2 is designed to disengage the STOP/START feature of the vehicle, and keep that feature disengaged even after the key has been cycled. Simple 2-wire installation (ground and power to the battery) is all that is required to install the interface in the vehicle. No programming required!

### APPLICATIONS

#### LD-GM1-SSO applications

Buick	Cadillac	Chevrolet (Cont)
Enclave ..... 2018	CTS.....2019	Traverse.....2018
Encore .....2016-2018	XT5.....2017-2018	Trax .....2016-2018
Envision ..... 2016-2019	<b>Chevrolet</b>	<b>GMC</b>
LaCrosse..... 2017-2019	Cruze .....2017-2018	Acadia .....2017-2018
Regal.....2017-2018	Equinox.....2018-2019	Terrain.....2018-2019
	Malibu .....2016-2017	Yukon.....2018

#### LD-GM2-SSO applications

Buick	Cadillac (Cont)	Chevrolet (Cont)
Enclave .....2019	XT4 .....2019-Up	Silverado.....2019-Up
Encore .....2019	XT5.....2019	Tahoe .....2019-Up
Regal.....2019	XTS.....2019	Traverse.....2019-Up
		Trax .....2019-Up
<b>Cadillac</b>	<b>Chevrolet</b>	<b>GMC</b>
CT6.....2019-2020	Corvette.....2019	Acadia .....2019-Up
Escalade.....2019-Up	Cruze .....2019	

### TABLE OF CONTENTS

Installation ..... 2

### INTERFACE COMPONENTS

- AXSSO-GM2 interface
- LD-GM1-SSO harness
- LD-GM2-SSO harness

### TOOLS & INSTALLATION ACCESSORIES REQUIRED


- Zip ties
- Zip tie cutter
- GM battery terminal wrench

### Product Info



**ATTENTION:** With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product.  
**NOTE:** Refer also to the instructions included with the aftermarket radio.

## INSTALLATION

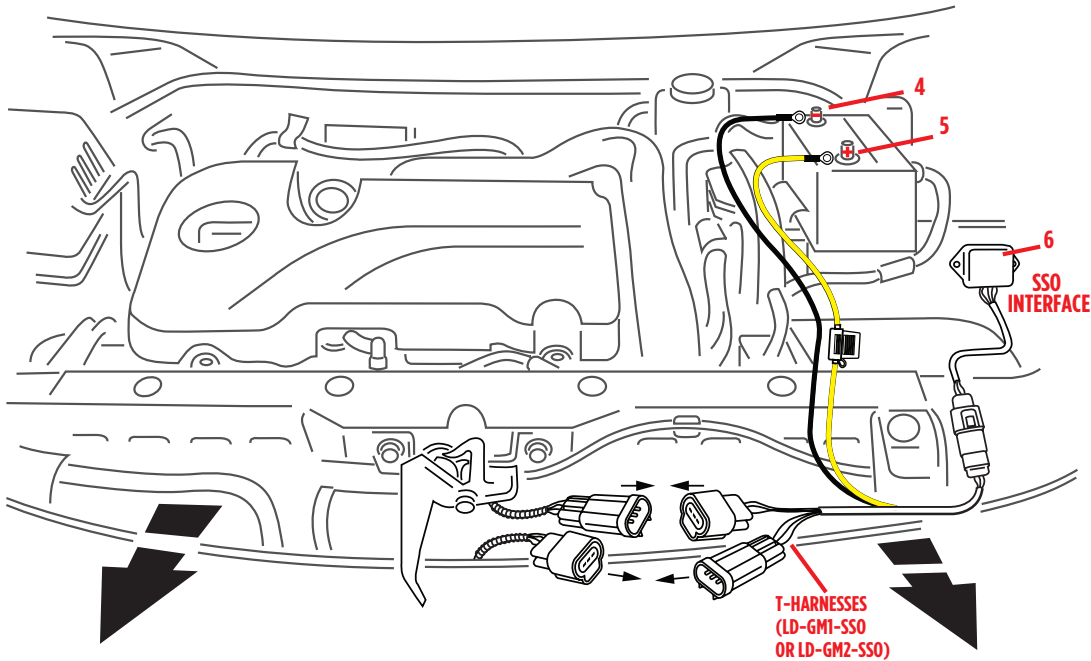

1. Open the hood and locate the hood pin switch harness underneath the hood latch.
2. Unplug the hood pin switch harness, then plug in the appropriate harness.
3. Route the power and ground wires to the vehicles battery.
4. Connect the **Black** wire to the negative terminal.
5. Connect **Yellow** wire to the positive terminal.
6. Find a safe and secure spot for the water resistant **AXSSO-GM2 interface**, away from any heat sources and moving parts. With the wiring harness facing downward, zip tie the interface securely.
7. The installation is now complete.

**Note:** There are 2 T-harnesses to choose from.

**Tech Tip!** After install, if the check engine light appears, remove ground connection that was made to the battery and splice into the **Brown** wire on the vehicle side of the T-harness.

(Figure shown for illustration purposes only. Actual vehicle and installation locations will differ)





# AXSSO-GM2

INSTALLATION INSTRUCTIONS

Having difficulties? We're here to help.



Contact our Tech Support line at:

**386-257-1187**



Or via email at:

[techsupport@metra-autosound.com](mailto:techsupport@metra-autosound.com)

### **Tech Support Hours (Eastern Standard Time)**

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



### **KNOWLEDGE IS POWER**

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto [www.installerinstitute.edu](http://www.installerinstitute.edu) or call 386-672-5771 for more information and take steps toward a better tomorrow.



**Metra recommends MECP  
certified technicians**