

2012 - 2018 Wrangler JK / JKU

1. Remove cubby or power window switch, and remove screw. Then remove screw from upper storage tray.



2. Remove kick panel, and remove two upper screws.



3. Lift up on dashboard cover.



4. Pull HVAC panel, starting from top towards interior. Locate the power outlet and unplug OE connector.




5. Connect t-harness and route accessory wires as indicated:
- Red wire: 12V 5Amp fused (accessory/key) power
 - Black wire: Harness Ground



6. Reinstall panels in reverse order of removal.

2018-UP Wrangler JL, 2020-UP Gladiator JT

1. Unclip and remove the panel below the steering column.

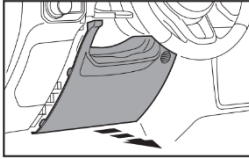

2. Using panel removal tool, remove the Start/HVAC panel



3. Remove (1) screw holding the accessory panel to the sub-dash. Locate panel clips and carefully pull each section free; this may require the panel removal tool.



4. Locate the power outlet. Disconnect the power outlet harness and connect the accessory power harness to that connector. Insert the other accessory power harness connector into the disconnected plug.



5. Connect t-harness and route accessory wires as indicated:
- Red wire: 12V 5Amp fused (accessory/key) power
 - Black wire: Harness Ground



6. Reinstall panels in reverse order of removal.