

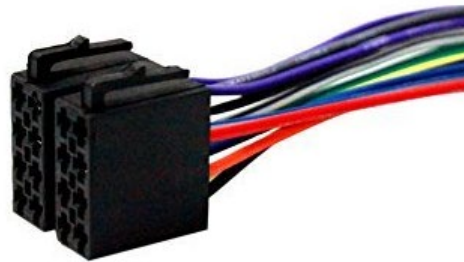


### Steering Wheel Controls With New JVC & Kenwood Radios

1. Locate the main connector on the back of the radio. These radios use an ISO/EURO (1784 shell) radio connector. (Figure A)
2. The SWC wire from the radio can be found in the bundle of wires above the main connector, labeled **REMOTE CONT.** (Figure B)
3. Program the kit, then refer to the **Select Radio** page from the instructions included with the kit.
4. Select JVC for the desired radio.  
**Note:** Regardless if it is a JVC or Kenwood radio, the desired radio code will be JVC.
5. Test the steering wheel controls for proper functionality.
6. The installation is now complete.

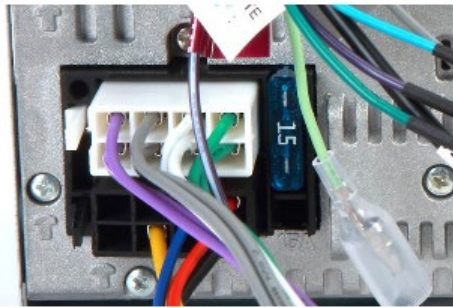

(Figure A)

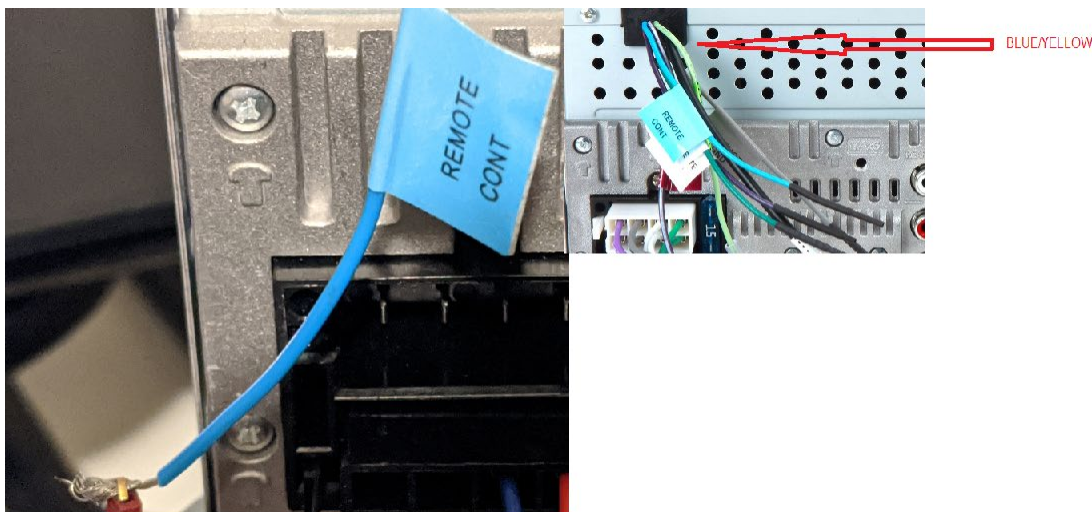

(Figure B)